

# WS Series Smart Weather Sensors

---

Operational Manual



**Copyright © OTT HydroMet Fellbach GmbH**

OTT HydroMet Fellbach GmbH  
Gutenbergstr. 20  
70736 Fellbach  
Germany

+49 711 51822 -0  
met-info@otthydromet.com  
[www.otthydromet.com](http://www.otthydromet.com)

All rights reserved.

All content is the intellectual property of OTT HydroMet. Reprinting, duplication and translation (even as excerpts) are only permitted with the prior written consent of OTT HydroMet.

Subject to technical change.

# Table of contents

|          |   |           |
|----------|---|-----------|
| <b>1</b> | <b>Scope of supply</b>                        | <b>6</b>  |
| <b>2</b> | <b>Order numbers and variant code</b>         | <b>7</b>  |
| 2.1      | Product variants                              | 7         |
| 2.2      | Accessories and spare parts                   | 7         |
| <b>3</b> | <b>About this manual</b>                      | <b>8</b>  |
| 3.1      | Other applicable documents and software       | 8         |
| 3.2      | General signs and symbols                     | 8         |
| 3.3      | Explanation of warnings                       | 9         |
| <b>4</b> | <b>General safety instructions</b>            | <b>10</b> |
| 4.1      | Intended use                                  | 10        |
| 4.2      | Potential misuse                              | 10        |
| 4.3      | Personnel qualification                       | 10        |
| 4.4      | Operator obligations                          | 10        |
| 4.5      | Personnel obligations                         | 10        |
| 4.6      | Correct handling                              | 10        |
| 4.7      | Health hazards                                | 11        |
| 4.7.1    | Risk of electrical shock                      | 11        |
| 4.7.2    | Beware of hair being sucked in                | 11        |
| 4.7.3    | Beware of hot surfaces                        | 11        |
| 4.8      | Working outdoor                               | 11        |
| 4.8.1    | Installation and maintenance at great heights | 11        |
| 4.8.2    | Using long cables                             | 11        |
| 4.8.3    | Working at roadside                           | 11        |
| 4.9      | Certification                                 | 12        |
| 4.9.1    | Europe, USA and Canada                        | 12        |
| 4.9.2    | Devices with precipitation radar              | 12        |
| <b>5</b> | <b>Product description</b>                    | <b>14</b> |
| 5.1      | Design and function                           | 14        |
| 5.2      | Product overview                              | 14        |
| <b>6</b> | <b>Transport, storage, and unpacking</b>      | <b>15</b> |
| 6.1      | Unpacking                                     | 15        |
| 6.2      | Storage                                       | 15        |
| <b>7</b> | <b>Installation</b>                           | <b>16</b> |
| 7.1      | Mechanical installation                       | 16        |
| 7.1.1    | Required tools and aids                       | 16        |
| 7.1.2    | Choosing a site                               | 16        |

|           |  |           |
|-----------|--|-----------|
| 7.1.3     | Fastening _____  | 18        |
| 7.1.4     | Aligning to north _____  | 19        |
| 7.1.5     | Setting rain gauge _____   | 19        |
| 7.2       | Electrical installation _____                                      | 20        |
| 7.2.1     | Electrical connections _____                                       | 20        |
| 7.2.2     | Supply voltage _____   | 21        |
| 7.2.3     | RS485 Interface _____  | 21        |
| 7.2.4     | Connecting ISOCON-UMB converter _____                              | 21        |
| 7.2.5     | Installing surge protection _____                                  | 22        |
| 7.2.6     | Connecting external sensors _____                                  | 22        |
| <b>8</b>  | <b>Commissioning for UMB data format _____</b>                     | <b>23</b> |
| 8.1       | Device set-up _____  | 23        |
| 8.2       | Configuration and testing _____                                    | 23        |
| 8.2.1     | Factory settings _____   | 24        |
| 8.3       | Configuration using UMB binary protocol _____                      | 24        |
| 8.3.1     | Configuration using ConfigTool.NET Version 1.5.1693 or newer _____ | 24        |
| 8.3.2     | Configuration using older versions of ConfigTool.NET _____         | 25        |
| 8.3.3     | Selecting device _____   | 25        |
| 8.3.4     | General settings _____   | 26        |
| 8.3.5     | Energy management _____  | 27        |
| 8.3.6     | Configuring external sensors _____                                 | 29        |
| 8.3.7     | Specific settings _____  | 29        |
| 8.4       | Testing _____  | 33        |
| <b>9</b>  | <b>Commissioning for SDI-12 data format _____</b>                  | <b>34</b> |
| 9.1       | Device set-up _____  | 34        |
| 9.2       | Configuration and testing _____                                    | 34        |
| 9.3       | Command set _____  | 35        |
| 9.4       | Data messages _____  | 37        |
| 9.5       | Additional measurement commands _____                              | 38        |
| 9.6       | Message device identification _____                                | 40        |
| 9.7       | Message verification _____   | 40        |
| <b>10</b> | <b>Commissioning for MODBUS format _____</b>                       | <b>42</b> |
| 10.1      | Device set-up _____  | 42        |
| 10.2      | Configuration and testing _____                                    | 42        |
| 10.3      | Addressing _____   | 42        |
| 10.4      | MODBUS functions _____   | 43        |
| 10.4.1    | Function 0x04 read input registers _____                           | 43        |
| 10.5      | Status and type coding _____                                       | 46        |
| <b>11</b> | <b>Maintenance _____</b>   | <b>47</b> |
| 11.1      | Maintenance schedule _____   | 47        |
| 11.2      | Checking rain gauge _____  | 47        |

|           |  |           |
|-----------|--|-----------|
| 11.3      | Updating firmware                        | 48        |
| <b>12</b> | <b>Troubleshooting</b>                   | <b>49</b> |
| 12.1      | Error elimination                        | 49        |
| <b>13</b> | <b>Repair</b>                            | <b>51</b> |
| 13.1      | Customer support                         | 51        |
| <b>14</b> | <b>Notes on disposing of old devices</b> | <b>52</b> |
| <b>15</b> | <b>Technical data</b>                    | <b>53</b> |
| 15.1      | General technical data                   | 53        |
| 15.2      | Electrical data                          | 53        |
| 15.3      | Dimensions and weight                    | 54        |
| 15.4      | Measuring range and accuracy             | 58        |

# 1 Scope of supply

The following item is included with delivery:

- Smart weather sensor

## 2 Order numbers and variant code

### 2.1 Product variants

| Variant  | Order number | Authorized region      | Frequency range     |
|----------|--------------|------------------------|---------------------|
| WS200    | 8371.1       | EU, NA (North America) | –                   |
| WS300    | 8372.1       | EU, NA                 | –                   |
| WS301    | 8374.1       | EU, NA                 | –                   |
| WS302    | 8374.2       | EU, NA                 | –                   |
| WS310    | 8374.5       | EU, NA                 | –                   |
| WS400    | 8369.2       | EU                     | 24.150 – 24.250 GHz |
| WS400-NA | 8369.1       | NA                     | 24.075 – 24.175 GHz |
| WS401    | 8377.1       | EU, NA                 | –                   |
| WS500    | 8373.1       | EU, NA                 | –                   |
| WS501    | 8375.1       | EU, NA                 | –                   |
| WS502    | 8375.2       | EU, NA                 | –                   |
| WS510    | 8375.5       | EU, NA                 | –                   |
| WS600    | 8370.2       | EU                     | 24.150 – 24.250 GHz |
| WS600-NA | 8370.1       | NA                     | 24.075 – 24.175 GHz |
| WS601    | 8376.1       | EU, NA                 | –                   |
| WS700    | 8380.2       | EU                     | 24.150 – 24.250 GHz |
| WS700-NA | 8380.1       | NA                     | 24.075 – 24.175 GHz |
| WS800    | 8381.2       | EU                     | 24.150 – 24.250 GHz |
| WS800-NA | 8381.1       | NA                     | 24.075 – 24.175 GHz |

**i** Products are delivered and pre-configured with a UMB protocol standard configuration. The full article number for a WS200 is 8371.1-U5140000. The standard delivery does not contain a sensor cable (change in February 2024).

### 2.2 Accessories and spare parts

| Item  | Order number |
|---|--------------|
| Mast 4.5 m  | 8357450      |
| Surge protection                                      | 8379.USP     |
| Traverse  | 8367.TRAV1   |
| ISOCON-UMB  | 8160.UISO    |
| Power supply unit 24 V/100 VA                         | 8366.USV1    |
| External rain gauge WTB100                            | 8353.10      |
| External temperature sensor WT1                       | 8160.WT1     |
| External passive road surface temperature sensor WST1 | 8160.WST1    |
| Connection cable 10 m                                 | 8370.UKAB10  |
| Connection cable 20 m                                 | 8370.UKAB20  |
| Connection cable 50 m                                 | 8370.UKAB50  |

## 3 About this manual

This operational manual is designed for WS devices manufactured from February 2024.

### 3.1 Other applicable documents and software

The following documents contain further information on installation, maintenance and calibration:

- User Manual Smart Weather Sensors
- Operating Manual UMB ISO Converter ISOCON
- Operating instructions surge protection

The following documents and software can be downloaded at [www.lufft.com](http://www.lufft.com):

- ConfigTool.NET
- UMB protocol description
- Firmware

**i** The devices can be operated with various protocols, e.g. XDR and UMB-ASCII. Further information on the protocols and the full description of UMB channels, SDI-12 and Modbus protocol can be found in the User Manual Smart Weather Sensors.

### 3.2 General signs and symbols

The signs and symbols used in the operational manual have the following meaning:

#### Practical tip

**i** This symbol indicates important and useful information.

#### Action

- ✓ Prerequisite that must be met before performing an action.
- ▶ Step 1
  - ⇒ Intermediate result of an action
- ▶ Step 2
  - ⇒ Result of a completed action

#### List

- List item, 1st level
  - List item, 2nd level

### 3.3 Explanation of warnings

To avoid personal injury and material damage, you must observe the safety information and warnings in the operating manual. The warnings use the following danger levels:

#### WARNING

##### WARNING

This indicates a potentially hazardous situation. If the hazardous situation is not avoided, it may result in death or serious injuries.

---

#### CAUTION

##### CAUTION

This indicates a potentially hazardous situation. If the hazardous situation is not avoided, it may result in moderately serious or minor injuries.

---

#### NOTICE

##### NOTE

This indicates a situation from which damage may arise. If the situation is not avoided, products may be damaged.

---

## 4 General safety instructions

### 4.1 Intended use

The smart weather sensors are used outdoors to measure and report various environmental parameters. The sensors are mounted on a stable mast or side bracket and aligned to look vertically upwards. The meteorological measurement values provided are typically used in professional road traffic management systems, renewable energy systems, air quality stations and for different hydro-meteorological applications.

### 4.2 Potential misuse

Any use of the product that does not comply with the intended use, be this intentional or negligent, is forbidden by the manufacturer.

- ▶ Use the product only as described in the operational manual.

### 4.3 Personnel qualification

The equipment described in this manual must be installed, operated, maintained and repaired by qualified personnel only.

- ▶ Obtain training from OTT HydroMet if necessary.

### 4.4 Operator obligations

The installer is responsible for observing the safety regulations. Unqualified personnel working on the product can cause risks that could lead to serious injury.

- ▶ Have all activities carried out by qualified personnel.
- ▶ Ensure that everybody who works on or with the product has read and understood the operational manual.
- ▶ Ensure that safety information is observed.
- ▶ File the operational manual together with the documentation of the entire system and ensure that it is accessible at all times.
- ▶ The operational manual is part of the product, forward the operational manual together with the product.

### 4.5 Personnel obligations

To avoid equipment damage and injury when handling the product, personnel are obliged to the following:

- ▶ Read the operational manual carefully before using the product for the first time.
- ▶ Pay attention to all safety information and warnings.
- ▶ If you do not understand the information and procedure explanations in this manual, stop the action and contact the service provider for assistance.
- ▶ Wear the necessary personal protective equipment.
- ▶ Pay attention that the devices with precipitation radar (WS400, WS600, WS700, WS800) generate an electromagnetic field that can be harmful to health and can cause cardiac pacemakers to malfunction.

### 4.6 Correct handling

If the product is not installed, used and maintained correctly, there is a risk of injury. The manufacturer does not accept any liability for personal injury or material damage resulting from incorrect handling.

- ▶ Install and operate the product under the technical conditions described in the operational manual.
- ▶ Do not change or convert the product in any way.
- ▶ Do not perform any repairs yourself.

- ▶ Get OTT HydroMet to examine and repair any defects.
- ▶ Ensure that the product is correctly disposed of. Do not dispose of it in household waste.

## **4.7 Health hazards**

### **4.7.1 Risk of electrical shock**

Live parts can cause electric shocks in the event of contact.

- ▶ Never take measurements on live electrical parts.
- ▶ Never touch live electrical parts.

### **4.7.2 Beware of hair being sucked in**

There is a small fan at the bottom of the device. Hair can be sucked into the fan when the device is connected to power.

- ▶ Tie up long hair.

### **4.7.3 Beware of hot surfaces**

As soon the device is connected to power the dome gets heated up to approximately 40 °C. Touching the dome can be painful.

- ▶ Do not touch the dome.
- ▶ Wear protective gloves if necessary.

## **4.8 Working outdoor**

### **4.8.1 Installation and maintenance at great heights**

It is advised to mount the product in a certain height. Therefore, there is a risk of falling down.

- ▶ Observe and follow the local safety regulations.
- ▶ Use suitable safety equipment.
- ▶ Inspect the safety equipment before use.
- ▶ Secure the person mounting or maintaining the device against falling down.
- ▶ Secure the device against falling down.

### **4.8.2 Using long cables**

Long cables are required to mount the product at great heights. Therefore, there is a risk of strangulation.

- ▶ Use long cables properly.
- ▶ Observe manufacturer's instructions.
- ▶ Observe safety regulations.

### **4.8.3 Working at roadside**

The device can be installed on a mast at the roadside. Special safety regulations apply to prevent accidents and injuries.

- ▶ Observe the safety regulations for working at the roadside and in the vicinity of the road carriageway.

## 4.9 Certification

### 4.9.1 Europe, USA and Canada

#### CE (EU)

The equipment meets the essential requirements of EMC Directive 2014/30/EU.

#### FCC (US)

FCC Part 15, Class "B" Limits

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

#### IC (CA)

**Canadian Radio Interference-Causing Equipment Regulation, ICES-003, "Class B"**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

### 4.9.2 Devices with precipitation radar

Devices with precipitation radar (WS400, WS600, WS700, WS800) are subject to approval regulations which differ between countries. The radar modules have been certified for use in EU, USA and Canada.

If the devices are operated in other jurisdictions, the following must be observed:

- ▶ Clarify and ensure compliance with any additional regulatory requirements.
- ▶ Obtain any required approvals or certificates at own risk and cost.

#### CE (EU)

The equipment meets the essential requirements of EMC Directive 2014/30/EU.

#### FCC (US)

FCC Part 15C – Statement intentional radiator.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

- i Unauthorized modification or changes to this wireless communication equipment will void the right to use it. Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void the FCC grant.

## IC (CA)

### Canadian Radio Interference-Causing Equipment Regulation, ICES- 001

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

**i** Unauthorized modification or changes to this wireless communication equipment will void the right to use it. Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment. Any change to the equipment will void the Industry Canada grant.


## 5 Product description

### 5.1 Design and function

The smart weather sensors can be used for the acquisition of a variety of measurement variables, as used for example for environmental data logging in road traffic management systems. Depending on the model, each device has a different combination of sensors for the various measurement variables.

The equipment is connected by way of an 8-pole screw connector and associated connection cable (10 m long). The measured values are requested over the RS485 interface in accordance with UMB protocol. During commissioning, configuration and measurement polling takes place using the ConfigTool.NET software.

### 5.2 Product overview

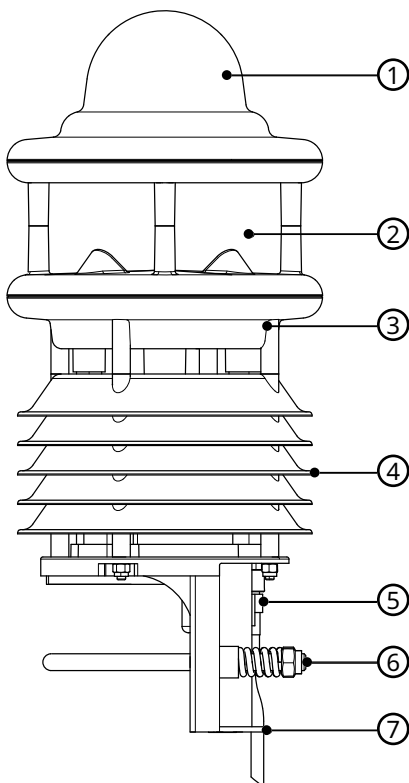

WS600

- |   |   |   |                                      |
|---|---|---|--------------------------------------|
| 1 | Precipitation sensor (heated)                         | 5 | Connector                            |
| 2 | Wind meter (heated)                                   | 6 | Mounting bracket                     |
| 3 | Air pressure sensor                                   | 7 | Notch for attaching connection cable |
| 4 | Air temperature and relative humidity sensor with fan |   |                                      |

## 6 Transport, storage, and unpacking

### 6.1 Unpacking

- ▶ Carefully remove the product from the packaging.
- ▶ Check that the delivery is complete and undamaged.
- ▶ If you find any damage or if the delivery is incomplete, then immediately contact the supplier and manufacturer.
- ▶ Keep the original packaging for any further transportation.

### 6.2 Storage

- ▶ Store within specified temperature ranges.
- ▶ Store in dry area.
- ▶ Store in original box where possible.

# 7 Installation

## 7.1 Mechanical installation

### 7.1.1 Required tools and aids

The following tools and aids are required:

- open-end or ring spanner, SW 13
- compass

### 7.1.2 Choosing a site



**Risk of injury due to improper installation!**

If the mast or the device is installed improperly, damage to the device and injury to people may result.

- ▶ Ensure that the mast stands on a stable surface.
- ▶ Ensure that the mast is sized and anchored appropriately.
- ▶ Ensure that the mast is earthed in accordance with the regulations.
- ▶ Use only approved and tested appliances (conductors, risers etc.) to install the device on the mast.

- 
- ▶ Ensure the following at the site:
    - Free access to the equipment for maintenance works
    - Reliable power supply for permanent operation
    - Good network coverage when transmitting over a mobile communications network

#### 7.1.2.1 Installing devices with wind measurement and compass


For accurate compass readings, an aluminium mast is recommended.

- ▶ Install the device on top of the mast at least 2 m above the ground.
- ▶ Ensure there is free field around the device.

**i** Buildings, bridges, embankments and trees may corrupt the wind measurement. Passing traffic may cause gusts which may influence the wind measurement.

### 7.1.2.2 Installing devices with radar precipitation measurement

When selecting the installation site, take care that the device is set up at an appropriate distance from other systems with a 24 GHz radar sensor, e.g. traffic counting devices on overhead gantry signs. Otherwise, cross effects and system malfunctions may occur. The distance to other measuring systems depends on their range of coverage and signal strength.

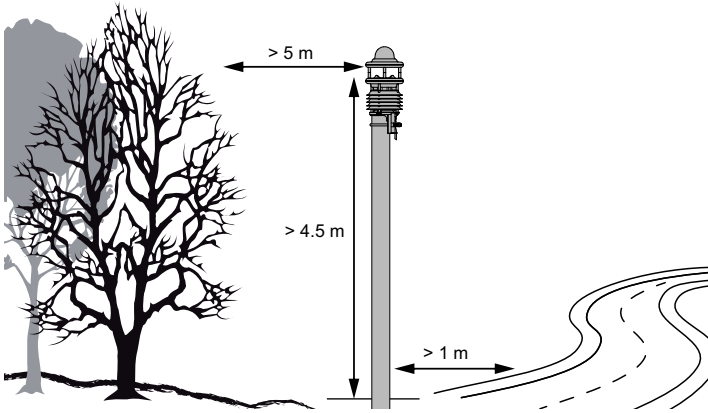

Installation near the road, WS600

If the device is used to observe the weather for road and traffic control systems, carry out the following installation steps:

- ▶ Install the device at the top of the mast or on a suitable mast crossbeam with a clear view at least 4.5 m above the ground. If there are no moving objects in wider circumference of the device, a lower installation height is possible.
- ▶ Keep at least 1 m distance to the road carriageway.
- ▶ Keep at least 5 m distance at the height of the device from moving objects, e.g. trees, bushes and bridges.
- ▶ Keep at least 8 m distance between devices with radar precipitation measurement.

- i Falling or moving objects, e.g. falling leaves or leaves blowing in the wind, may cause false measurements, e.g. incorrect precipitation types are measured.
- i Strong wind may affect the accuracy of the precipitation measurement. Installation locations where wind turbulence is to be expected, e.g. due to buildings, are not suitable.


### 7.1.2.3 Installing devices with rain gauge

The site must be chosen in such a way that pollution of the rain gauge funnel e.g. by falling leaves is avoided.

- ▶ Install the device on top of the mast or on the crossbar with distance to the mast.
- ▶ Ensure that the device is mounted exactly perpendicular to the mast or the crossbar, otherwise the precision of the rain gauge may be influenced.


#### 7.1.2.4 Installing devices with global radiation measurement

- ▶ Install the device on top of the mast.
- ▶ Chose a shadow free location with 360° free view to the horizon at the height of the pyranometer.
- ▶ Keep a distance of at least 10 times the object height relative to the device from shadowing objects, e.g. trees and buildings.

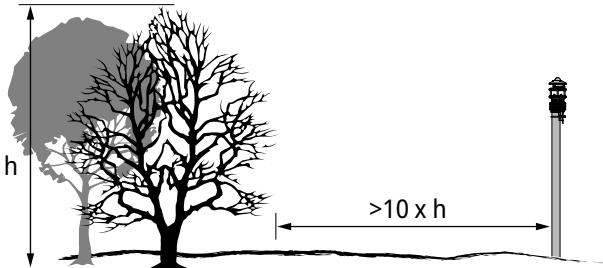

#### 7.1.3 Fastening

The mounting bracket is designed to be installed on top of a mast with a diameter of 60 to 76 mm or on a suitable mast crossbeam.

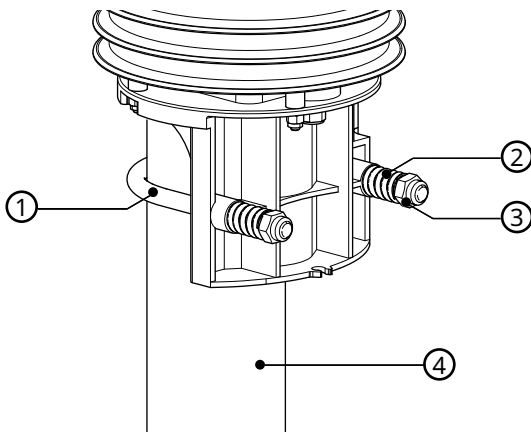


- 1 Mounting bracket
- 2 Spring

- 3 Nut with washer
- 4 Mast


- ▶ Loosen the nuts.
- ▶ Push the device onto the top of the mast or crossbeam from above.
- ▶ Tighten the nuts evenly until they touch the springs but the device can still be moved easily.
- ▶ For wind meters, align the device to the north.
- ▶ Tighten both nuts with 3 revolutions.

### 7.1.4 Aligning to north

In order for the wind direction to be displayed correctly, the device must be aligned to the north. The device has a number of directional arrows for this purpose.

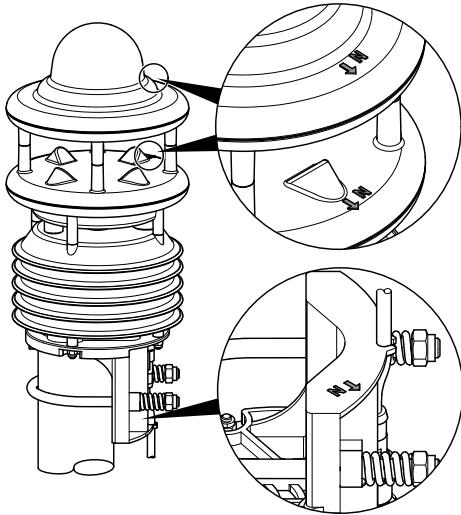

- ▶ If the device is already installed, loosen both nuts evenly until the device can be turned easily.
- ▶ Using the compass, identify the north and fix a point of reference on the horizon.
- ▶ Position the device in such a way that the south and north wind sensors are aligned with the fixed point of reference in the north.

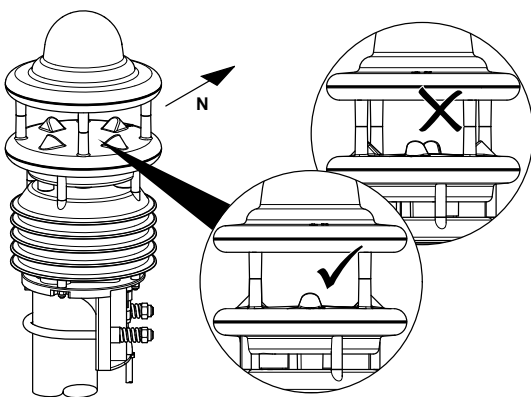

- ▶ Tighten both nuts with 3 revolutions.

**i** The magnetic North Pole displayed by the compass differs from the Geographic North Pole. When aligning the device, the declination (variation) at the location must be taken into account. Depending on the location, the deviation can be more than 15°, for example in North America. In Central Europe the variation is less than 3° and can be neglected.

### 7.1.5 Setting rain gauge

The devices with rain gauge can be operated with resolutions 0.2 mm and 0.5 mm. To change the resolution, the effective area of the funnel is modified using the reduction ring supplied.

- ▶ Mount the reduction ring on the funnel to set the resolution to 0.5 mm.
- ▶ Mount the funnel without the reduction ring to set the resolution to 0.2 mm.
- ▶ Set the resolution in the ConfigTool.NET software.

## 7.2 Electrical installation

**i** Ultrasonic device do generate noise close-by the device and not hearable by humans.

### 7.2.1 Electrical connections




#### WARNING

**Electric shock due to incorrectly connected device!**

If the device is not connected correctly, it may be permanently damaged and an electric shock may result.

- ▶ Ensure that the device is connected correctly.
- ▶ Ensure that the cable shielding is connected to earth in the electrical cabinet.
- ▶ Remove the yellow protective cap before plugging the device in.

There is an 8-pole screw connector on the underside of the device. This serves to connect the supply voltage and the interfaces via the connection cable.

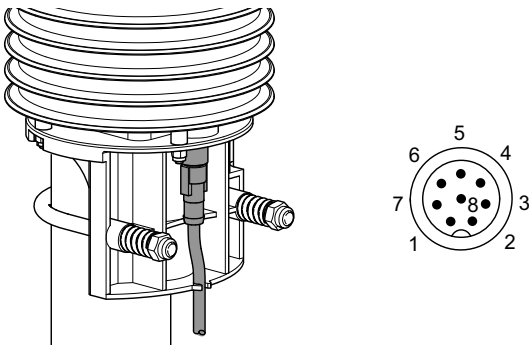

#### Pin assignment

| Number | Color  | Assignment  |
|--------|--------|---|
| 1      | White  | Supply voltage ground and SDI-12_GND                          |
| 2      | Brown  | Positive supply voltage (through 2.5 A fuse where required)*  |
| 3      | Green  | RS485_A (+)   |
| 4      | Yellow | RS485_B (-) or SDI-12 data line                               |
| 5      | Gray   | External sensor a   |
| 6      | Pink   | External sensor b   |
| 7      | Blue   | Heating voltage ground  |
| 8      | Red    | Positive heating voltage (through 2.5 A fuse where required)* |

\*WS400, WS600, WS700, WS800: Supply voltage and heating voltage must be protected by a fuse 2.5 A (fine) each.

**i** The supply voltage and the heating voltage are protected against polarity reversal.

#### 7.2.1.1 Connecting devices in SDI-12 mode

- ▶ Connect the signal ground (SDI-12\_GND) to line 1 (white), if the data logger and device supply voltage are DC-isolated.
- ▶ Do not connect the line 3 (green).

## 7.2.2 Supply voltage

The supply voltage is 4 to 30 V DC. The power supply unit used must be approved for operation with equipment of protection class III (SELV). Operation with a supply voltage of 24 V is recommended. Limitations apply in case of supply voltages lower than 12 V.

### 7.2.2.1 Limitations in 12 V mode

If the heating is operated on 12 V DC, the functional restrictions in winter operation has to be kept in mind. A heating voltage of 24 V DC is recommended to guarantee full heating duty.

### 7.2.2.2 Limitations with supply voltage below 12 V

When operating devices with a supply voltage lower than 12 V DC, the fan is not switched on regardless of the fan operating mode. This may influence the accuracy of the temperature and humidity measurement in case of intensive solar radiation or calm wind situations and lead to deviations of the compass measurement values.


When operating devices in power save modes with supply voltages below 12 V, the minimal supply voltage depends on the length of the connection cable.

## 7.2.3 RS485 Interface

The device has a half-duplex, 2 wire RS485 interface for configuration, measurement polling and the firmware update.

## 7.2.4 Connecting ISOCON-UMB converter

The ISOCON-UMB communication module converts RS485 into RS232.

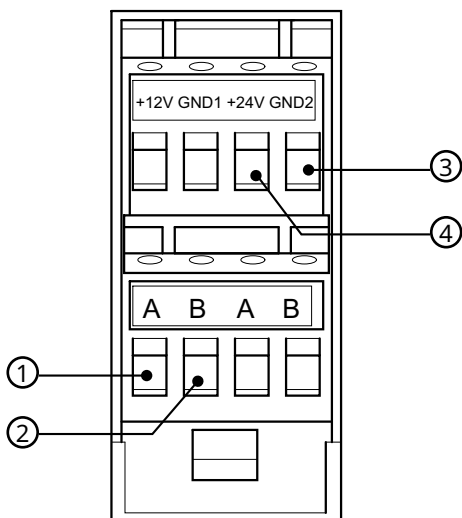

- 1 Green: RS485 interface A
- 2 Yellow: RS485 interface B

- 3 White: supply voltage ground GND2
- 4 Brown: positive supply voltage +24 V

- ▶ Connect the brown, white, green and yellow wires to the ISOCON-UMB converter.
- ▶ Connect the red and blue wire direct to the power supply unit, not to the ISOCON-UMB converter.
- ▶ Refer to the operating manual UMB ISO converter ISOCON.


### 7.2.5 Installing surge protection

The surge protection serves to protect the device against voltage spikes.

- ▶ Install the surge protection between the device and ISOCON-UMB converter.
- ▶ Refer the operating instructions of the surge protection.

### 7.2.6 Connecting external sensors

External temperature and precipitation sensors can be connected to the device. The connection is made via the standard connector plug of the device and the external sensor will be connected at the end of the delivered cable. All external sensors are unipolar, so any connection sequence can be chosen.

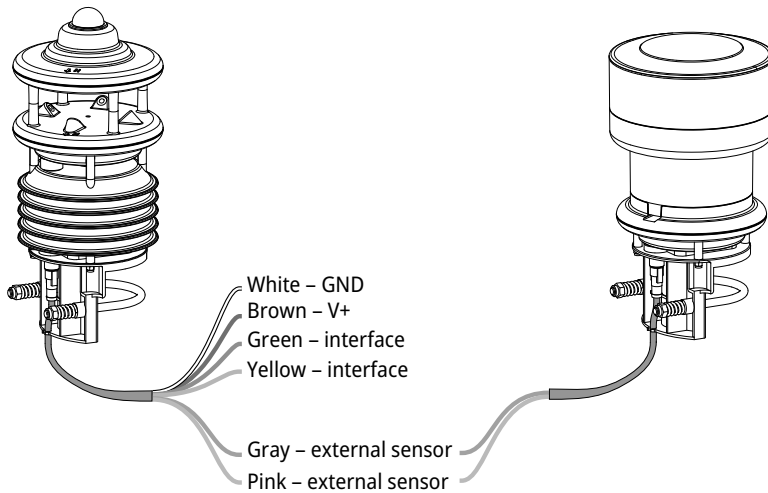

*Connection WS501 and external rain gauge (WTB100)*

- ▶ Avoid parasitic coupling when connecting.
- ▶ Use a short cable for the connection.
- ▶ When the external sensor is mounted near to the device while the control cabinet is distant, install an additional distribution box.
- ▶ Connect the external sensor to the gray and pink wires of the connection cable.
- ▶ Set the type of the external sensor in the ConfigTool.NET software.

## 8 Commissioning for UMB data format

- i The devices can be operated with various protocols, e.g. XDR and UMB-ASCII. Further information on the protocols and the full description of UMB channels, SDI-12 and Modbus protocol can be found in the User Manual Smart Weather Sensors.

### 8.1 Device set-up

After the equipment has been installed and connected correctly, the device begins autonomously to take measurements. No protective cover needs to be removed from the device.

The following is required for configuration and testing purposes:

- Windows® PC with serial interface
- ConfigTool.NET software
- Interface cable: RS485 – USB interface adapter

Proceed as follows for commissioning:

- ▶ Check for correct equipment operation on site by carrying out a measurement request with the aid of the ConfigTool.NET software.
- ▶ Configure the local altitude to ensure the correct calculation of the relative air pressure.
- ▶ To ensure a correct wind measurement, align the device to the north or activate the automatic compass correction.
- ▶ Configure the local declination to get correct compass headings.
- ▶ If several smart weather sensors are operated on a UMB network, assign a unique device ID to each sensor.

### 8.2 Configuration and testing

For configuration and testing OTT HydroMet Fellbach GmbH provides the proprietary software ConfigTool.NET. ConfigTool.NET can also be used to update the firmware of the device.

- ▶ Download the ConfigTool.NET software: [www.lufft.com/resources/](http://www.lufft.com/resources/)
- ▶ Install the software on the computer.
- ▶ Get familiar with the software in general.
- ▶ Ensure to always use the latest version of ConfigTool.NET.
- ▶ During configuration and testing, disconnect other devices that poll the UMB-Bus, e.g. modem or LCOM.
- ▶ Ensure that the connection settings of ConfigTool.NET are conform to the settings of the device.

- i The functions explained below may not be available for all types of the smart weather sensor.

- i The operation of the ConfigTool.NET is described in detail in the help function of the Windows® PC software. For this reason only the menus and functions specific to the device are described below.

### 8.2.1 Factory settings

The device is delivered with the following settings:

| Specification        | Value  |
|----------------------|--|
| Class ID             | 7 (cannot be modified)   |
| Device ID            | 1 (gives address 7001h = 28673d)<br>200 (fixed address since firmware 6.8) |
| Baudrate             | 19200  |
| RS485 protocol       | Binary   |
| Calculation interval | 10 measurements  |
| Local altitude       | 0 m  |


### 8.3 Configuration using UMB binary protocol


When the device is using UMB binary protocol the baudrates and the parity can be adjusted in the ConfigTool.NET software. The interface is operating in standard UMB mode (19200 8N1) and responds to the configured ID and additionally to ID 200 for the first 5 seconds after power up or reset. If a valid UMB telegram is received within these 5 seconds, the device will stay in UMB mode for the configured time (several minutes) so that the configuration can be modified.

**i** Starting with firmware version v6.8 WSx00 always responds to ID 200 additional to the configured ID. So ID 200 may be considered to be a broadcast address without functional restrictions. For communication via ID 200 only one device of a device class (in this case WSx00 and WS3000, device class 7) may be connected to one UMB bus. WSx00 with firmware version < v6.4: Devices configured for ID 1 will stay at ID 1.

#### 8.3.1 Configuration using ConfigTool.NET Version 1.5.1693 or newer

With ConfigTool.NET Version 1.5.1693.0 or newer, the communication in UMB standard mode is as follows:

- ▶ Connect the PC to the device through a RS485 converter.
- ▶ Start the ConfigTool.NET software and create a new workspace with communication parameters set to 19200Bd, 8N1.
- ▶ On *Workspace Details* page click the magnifier button  to open the *Device Search* window.

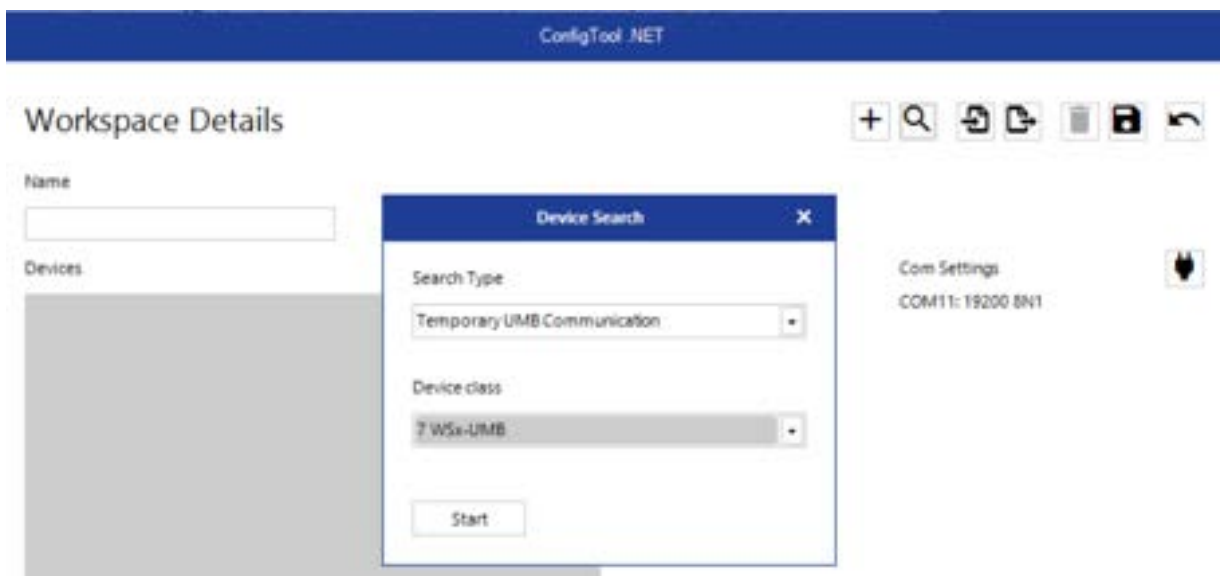


- ▶ In the *Search Type* section, select *Temporary UMB Communication*.
  - ▶ In the *Device class* section, select *7 WSx-UMB*.
  - ▶ Click on the **Start** button and restart the device (power off / on).
- ⇒ ConfigTool.NET establishes a connection (ID 1 or ID 200) within a few seconds and reads the channel list.
- ⇒ The device is ready for configuration work.


### 8.3.2 Configuration using older versions of ConfigTool.NET

When using older versions of ConfigTool.NET or other tools the communication can be opened by the following procedure:

- ▶ Connect the PC to the device through a RS485 converter.
  - ▶ Start ConfigTool.NET and create a WSx00-UMB with ID 200 (device with firmware version < v6.4 and ID 1: use ID 1).
  - ▶ Open the page *Device Settings*.
  - ▶ Alternatively, start the measurement with at least one channel and with 1 second polling rate.
  - ▶ Restart the device (power off / on).
- ⇒ The device establishes the connection (green indicator, "Connected") within a few seconds.
- ⇒ When using the alternative method valid measurement values will be indicated within a few seconds. The ConfigTool.NET measurement can then be stopped.
- ⇒ The interface is now open for configuration.

### 8.3.3 Selecting device

- ▶ Select an existing workspace or create a new one.
- ▶ Click the  button to add a new device to the workspace.

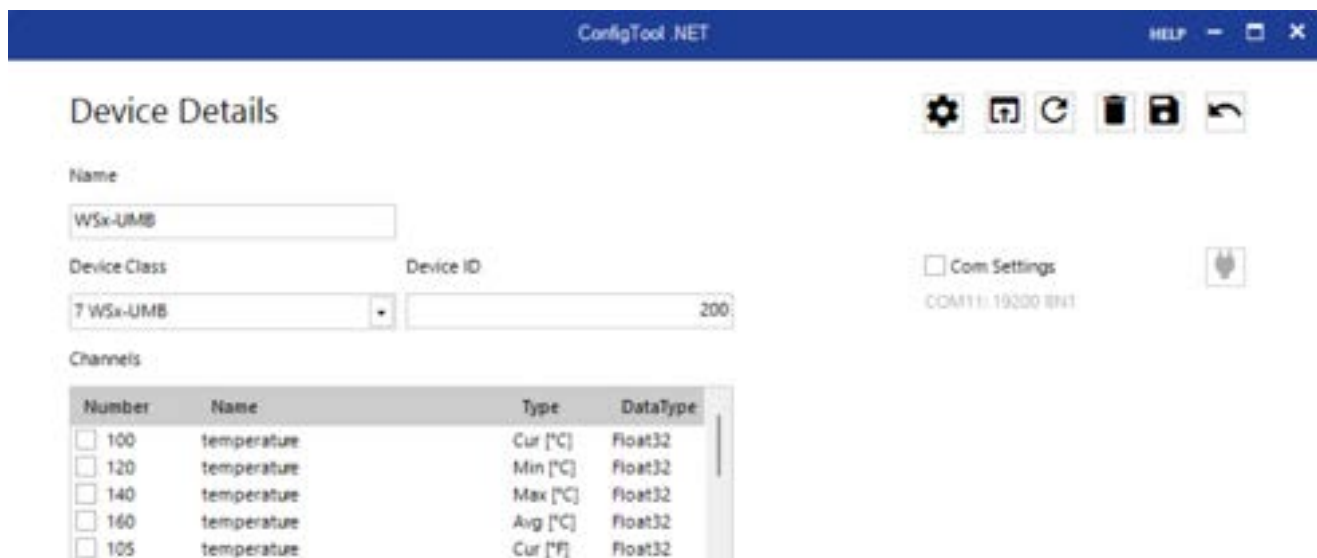

- ⇒ The device appears in the selection menu as *WSx-UMB* (Class ID 7).
- ▶ Enter a *Name* for the new device and adjust the *Device ID* if necessary.
  - ▶ Confirm with **OK**.

### 8.3.4 General settings

| General device description  |                                   |
|-----------------------------|-----------------------------------|
| Serial number               | 330                               |
| Tested                      | 215                               |
| Project number              | 1009                              |
| Rev. bom                    | 16                                |
| Re. schematic               | 13                                |
| Rev. hardware               | 13                                |
| Rev. software               | 60                                |
| Rev. config                 | 26                                |
| Rev. product                | 41                                |
| Device type                 | 7                                 |
| Device identification       |                                   |
| Class-ID                    | 7                                 |
| Device-ID                   | 2                                 |
| Name                        | WSx-UMB                           |
| Description                 | compact weather station WSS01-UMB |
| Device parameters           |                                   |
| Baudrate                    | 19200 Bd                          |
| Protocol                    | UMB-Binary                        |
| Timeout for protocol change | 10                                |

| Parameter                   | Description   |
|-----------------------------|---|
| Device-ID                   | Factory setting: 1<br>Assign the IDs for the devices in ascending order.  |
| Description                 | To differentiate the devices enter a description, e.g. the location.  |
| Baudrate                    | Transmission speed of the RS485 interface<br>Factory setting: 19200<br>DO NOT change for operation with ISOCON-UMB.                                     |
| Protocol                    | Communication protocol of the device: UMB-Binary, UMB-ASCII, SDI-12, MODBUS-RTU, MODBUS-ASCII, Terminal-Mode, XDR                                       |
| Timeout for protocol change | In the event of a temporary changeover of the communication protocol, the system switches back to the configured protocol after this time (in minutes). |

- i** If the baudrate is changed, after saving the configuration on the device, the device communicates at the new baudrate. When operating the device in a UMB network with ISOCON-UMB, this baudrate must not be changed; otherwise the device is no longer addressable and can no longer be configured.

### 8.3.5 Energy management

The energy consumption of the device can be adapted to the circumstances of the installation by setting the following parameters:

|                            |            |
|----------------------------|------------|
| <b>Generic Parameters</b>  |            |
| Altitude                   | 0          |
| SDI-12 Units               | Metric     |
| Compass correction         | Off        |
| Operation mode             | Normal     |
| External sensor            | Rain gauge |
| Rain gauge resolution      | 0.2 mm     |
| <b>TFF</b>                 |            |
| Temperature offset         | 0          |
| Relative humidity offset   | 0          |
| Temperature interval       | 10         |
| Relative humidity interval | 10         |
| Fan                        | On         |
| <b>Temperature, ext.</b>   |            |
| Temperature offset         | 0          |
| <b>Pressure</b>            |            |
| Air pressure offset        | 0          |
| Air pressure interval      | 10         |
| <b>Global radiation</b>    |            |
| Global radiation interval  | 10         |
| <b>Wind</b>                |            |
| Wind speed min.            | 0.3        |
| Setpoint temperature       | 50         |
| Wind interval              | 10         |
| Heater mode                | Auto       |
| Heater temperature Mode 1  | 5          |
| Eco Mode follow up time    | 30         |
| <b>Compass</b>             |            |
| Compass offset             | 0          |

| Parameter      | Description   |
|----------------|---|
| Operation mode | The power consumption of the device can be adjusted to the properties of the individual installation.<br>The operation of the power save modes has certain constraints.   |
| Fan            | To reduce electrical power, the fan can be switched off.<br>If the fan is switched off, all heaters will also be switched off. With the fan switched off deviations in temperature and humidity measurement can occur by solar radiation. |
| Heater mode    | The heating is set to <i>Auto</i> on delivery. This is the recommended operating mode.  |

#### 8.3.5.1 Normal operation mode

In normal operation mode, all specified properties of the devices are available. The power consumption is mainly determined by heating and fan operation.

### 8.3.5.2 Power saving mode 1

The power saving mode 1 has the following effects:

- The ventilation of the temperature and humidity unit is switched off.
- All heaters are switched off.
- The radar rain sensor of the following devices is not working continuously: WS800, WS700, WS600, WS400. The sensor is activated once per minute for one second. If precipitation is detected, it remains turned on until the end of the event. Otherwise the sensor is deactivated again after this second.
- Compass measurement is only performed once after power up. The deactivated fan automatically switches on for the duration of this measurement.
- The WS700 and WS800 increase the measuring cycle time for global radiation from 10 seconds to 1 minute.
- The lightning detection probe in the WS800 is activated once per minute for one second similar to the radar rain sensor.

The power saving mode 1 has the following restrictions:

- With the fan switched off deviations in temperature and humidity measurement can occur by solar radiation.
- Only limited winter operation is possible because any icing may prevent the correct operation of the rain sensor or wind meter.
- The rain detection may be delayed up to 2 minutes. Short events are possibly not detected. Thus, deviations in the accuracy of the precipitation quantity are possible.
- Short lightning events are possibly not detected.

### 8.3.5.3 Power saving mode 2

The power saving mode 2 permits further reduction of the power consumption. The device is almost completely switched off and only wakes up for 10 to 15 seconds when data is requested for one measurement cycle. The total consumption is mostly determined by the data request interval.

The power saving mode 2 has the following restrictions:

- All restrictions of power saving mode 1
- The power saving mode 2 is not available for devices with radar rain sensor: WS800, WS700, WS600, WS400. For low power applications, devices with tipping bucket rain gauge are recommended.
- The calculation of average, minimum and maximum as well as precipitation intensity are not available. Only instantaneous values will be transmitted.
- Compass measurement is only performed once after power up. The deactivated fan automatically switches on for the duration of this measurement.
- The communication protocol Modbus is not available.
- When using the UMB protocol, the interval length must be at least 15 seconds to ensure that the measurement and transmission cycle are completed. Otherwise, the device may stay in transmission state without starting a new measurement.
- Joint operation with other sensors in a UMB network is only possible, if each telegram wakes up the device for several seconds and the minimum interval length is observed. This increases the total power consumption.
- Mixed operation of devices in power saving mode 2 with devices in normal operation and fast request rates within the same UMB network is not possible.

### 8.3.6 Configuring external sensors

The device must be configured for the selected type of external sensor to enable the correct evaluation of the measurement data.

- ▶ Select the external sensor.

| Generic Parameters    |            |
|-----------------------|------------|
| Altitude              | 0          |
| SDI-12 Units          | Metric     |
| Compass correction    | Off        |
| Operation mode        | Normal     |
| External sensor       | Rain gauge |
| Rain gauge resolution | 0.2 mm     |

- i If data is requested from the channels of an external sensor currently unselected, the device responds with "invalid channel".

### 8.3.7 Specific settings

#### 8.3.7.1 Temperature, humidity and fan settings

| TFF                        |    |
|----------------------------|----|
| Temperature offset         | 0  |
| Relative humidity offset   | 0  |
| Temperature interval       | 10 |
| Relative humidity interval | 10 |
| Fan                        | On |

| Parameter                | Description   |
|--------------------------|---|
| Temperature offset       |   |
| Relative humidity offset | Absolute offset on the measurement in the unit indicated in the parameter description field (for on-site calibration).  |
| Interval                 | Time in minutes for the minimum, maximum and average value calculation interval.  |
| Fan                      | To reduce electrical power, the fan can be switched off.<br>If the fan is switched off, all heaters will also be switched off. With the fan switched off deviations in temperature and humidity measurement can occur by solar radiation. |

- i In order to calculate dew point, absolute humidity and mixing ratio, the temperature and humidity measurement always requires the same interval. For this reason different intervals cannot be set.

#### 8.3.7.2 Pressure settings

| Generic Parameters    |            |
|-----------------------|------------|
| Altitude              | 0          |
| SDI-12 Units          | Metric     |
| Compass correction    | Off        |
| Operation mode        | Normal     |
| External sensor       | Rain gauge |
| Rain gauge resolution | 0.2 mm     |
| Pressure              |            |
| Air pressure offset   | 0          |
| Air pressure interval | 10         |

| Parameter             | Description   |
|-----------------------|---|
| Altitude              | Enter the local altitude in meters here for the correct calculation of relative air pressure (referenced to sea level). |
| Air pressure offset   | Absolute offset on the measurement in the unit indicated in the parameter description field.                            |
| Air pressure interval | Time in minutes for the minimum, maximum and average value calculation interval.  |

### 8.3.7.3 Wind and compass settings

|                           |            |
|---------------------------|------------|
| <b>Generic Parameters</b> |            |
| Altitude                  | 0          |
| SDI-12 Units              | Metric     |
| Compass correction        | Off        |
| Operation mode            | Normal     |
| External sensor           | Rain gauge |
| Rain gauge resolution     | 0.2 mm     |
| <b>Wind</b>               |            |
| Wind speed min.           | 0.3        |
| Setpoint temperature      | 50         |
| Wind interval             | 10         |
| Heater mode               | Auto       |
| Heater temperature Mode 1 | 5          |
| Eco Mode follow up time   | 30         |
| <b>Compass</b>            |            |
| Compass offset            | 0          |

| Parameter                 | Description  |
|---------------------------|--|
| Compass correction        | With activated compass correction all wind direction values will be corrected according to the alignment of the device, as evaluated by the compass. |
| Wind speed min.           | Minimum wind speed from which a measurement is transmitted, in the unit indicated in the parameter description field.                                |
| Setpoint temperature      | Setpoint temperature in °C for the wind sensor heater.   |
| Wind interval             | Time in minutes for the minimum, maximum and average value calculation interval.   |
| Heater mode               | The device can be configured for heating in different operating modes. Select <i>Auto</i> in normal operating mode.                                  |
| Heater temperature Mode 1 | Temperature in °C, below which the heating is active in Mode 1.  |
| Eco Mode follow up time   | Power-on time of the heating in Eco Mode 1   |
| Compass deviation         | Dependent on the location of the installation; the local declination of the earth magnetic field has to be considered.                               |

### 8.3.7.4 Precipitation sensor settings (radar)

| Radar rain sensor          |          |
|----------------------------|----------|
| Evaporation per day        | 0.24     |
| Rainfall correction factor | 1        |
| Snowfall correction factor | 1        |
| Follow up time             | 120      |
| Shnow factor               | 20       |
| Rain factor                | 50       |
| Heater mode                | Auto     |
| Heater temperature Mode 1  | 5        |
| Set point temperature      | 70       |
| Follow up time Mode 1      | 30       |
| Operation mode             | Standard |
| Rain gauge resolution      | 0.2 mm   |

| Parameter      | Description   |
|----------------|---|
| Heater mode    | The device can be configured for heating in different operating modes. Select <i>Auto</i> in normal operating mode.               |
| Follow up time | Shows the detected precipitation type for this time in seconds. To cover all events, this time must be adjusted to the poll rate. |

**i** The other parameters, e.g. evaporation or correction factors, can be used to adapt the precipitation detection to special local conditions. They should only be modified after consultation with OTT HydroMet Fellbach GmbH, as they have a major influence on the functioning and accuracy of the sensor.

### 8.3.7.5 Precipitation sensor settings (rain gauge)

| Radar rain sensor          |          |
|----------------------------|----------|
| Evaporation per day        | 0.24     |
| Rainfall correction factor | 1        |
| Snowfall correction factor | 1        |
| Follow up time             | 120      |
| Shnow factor               | 20       |
| Rain factor                | 50       |
| Heater mode                | Auto     |
| Heater temperature Mode 1  | 5        |
| Set point temperature      | 70       |
| Follow up time Mode 1      | 30       |
| Operation mode             | Standard |
| Rain gauge resolution      | 0.2 mm   |

| Parameter             | Description   |
|-----------------------|---|
| Rain gauge resolution | The resolution depends on whether the reduction ring is fitted or not.<br>Funnel with reduction ring: 0.5 mm<br>Funnel without reduction ring: 0.2 mm |

**i** If the mechanical setting and configuration setting do not conform, the sensor will deliver wrong precipitation values.


### 8.3.7.6 Reset precipitation quantity

To reset the accumulated absolute precipitation quantity, proceed as follows:

- ▶ Click the reset symbol in the ConfigTool.NET software, top right of the window header.



- ▶ In the *Target* section, select a new target from the drop-down menu.

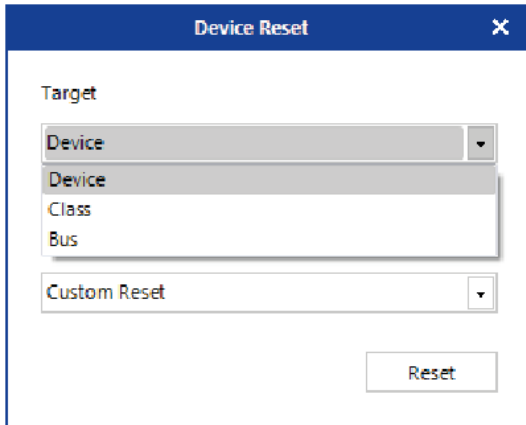

| Parameter | Description                              |
|-----------|--|
| Device    | Currently used device                    |
| Class     | Class of devices                         |
| Bus       | All devices connected to the UMB network |

- ▶ In the *Reset Type* section, select *Custom Reset*.



- ▶ Click the **Reset** button.

### 8.3.7.7 Global radiation settings



| Parameter                 | Description   |
|---------------------------|---|
| Global radiation interval | Time in minutes for minimum, maximum and average value calculation. |

### 8.3.7.8 Lightning sensor settings



| Lightning sensor   |    |
|--------------------|----|
| Lightning interval | 10 |

| Parameter          | Description   |
|--------------------|---|
| Lightning interval | Time in minutes for minimum, maximum and average value calculation. |

### 8.4 Testing

The functions of the device can be tested with the ConfigTool.NET software by polling various channels.

- ▶ Click on the desired channel.

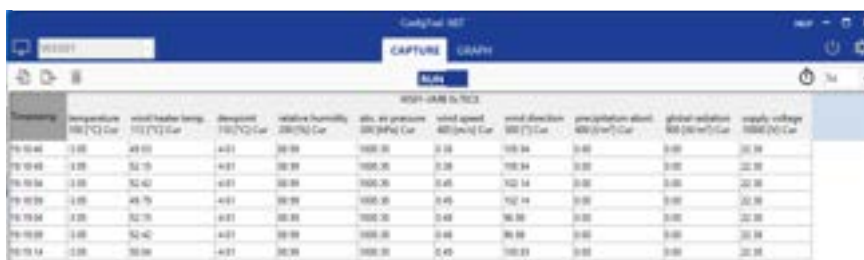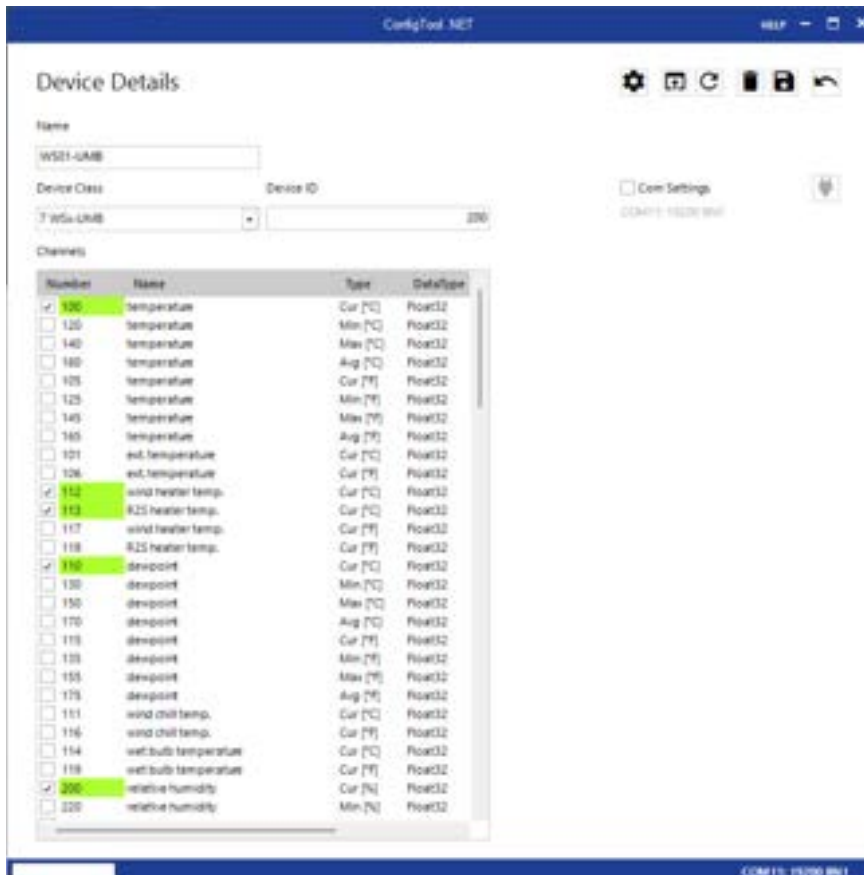

Example of measurement polling

- i The ConfigTool.NET software is provided for test and configuration purposes only. The tool is not suitable for the permanent acquisition of measurement data. For this purpose the use of professional software is recommended, e.g. Lufft SmartView3.

## 9 Commissioning for SDI-12 data format

- The devices can be operated with various protocols, e.g. XDR and UMB-ASCII. Further information on the protocols and the full description of UMB channels, SDI-12 and Modbus protocol can be found in the User Manual Smart Weather Sensors.

### 9.1 Device set-up

Preconfigured smart weather sensors with the SDI-12 protocol are available upon request.


The communication in the SDI-12 mode of the smart weather sensor is conforming to the standard defined in "SDI-12 A Serial-Digital Interface Standard for Microprocessor-Based Sensors Version 1.3 January 12, 2009". The device may be operated in bus mode together with other SDI-12 sensors, connected to one SDI master (logger).

With firmware version v69, or higher an option for SDI-12 communication through RS485 is available. If this feature is also permitted by the SDI-12 logger in use, it allows communication over longer distances and reduces the susceptibility to electromagnetic interferences compared to the hardware interface defined by the SDI-12 standard.

### 9.2 Configuration and testing


The parameters for SDI-12 must be set in the ConfigTool.NET software.

- Set the *Device Parameters* as follows:  
Baudrate: 1200 Bd  
Protocol: SDI-12

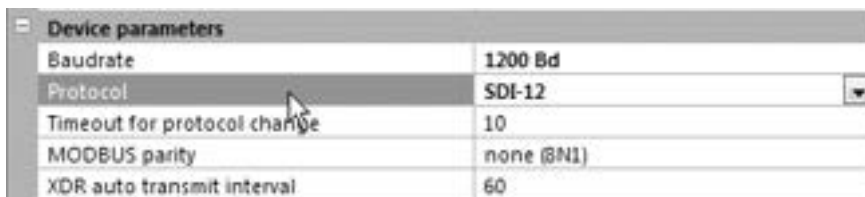


| Device parameters           |            |
|-----------------------------|------------|
| Baudrate                    | 1200 Bd    |
| Protocol                    | SDI-12     |
| Timeout for protocol change | 10         |
| MODBUS parity               | none (8N1) |
| XDR auto transmit interval  | 60         |

- Select the unit *Metric* or *Imperial (US)* of the transmitted measurement data.

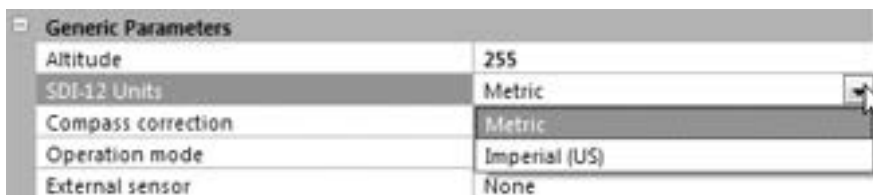

| Generic Parameters |               |
|--------------------|---------------|
| Altitude           | 255           |
| SDI-12 Units       | Metric        |
| Compass correction | Metric        |
| Operation mode     | Imperial (US) |
| External sensor    | None          |

- Select whether to communicate via the RS485 standard.

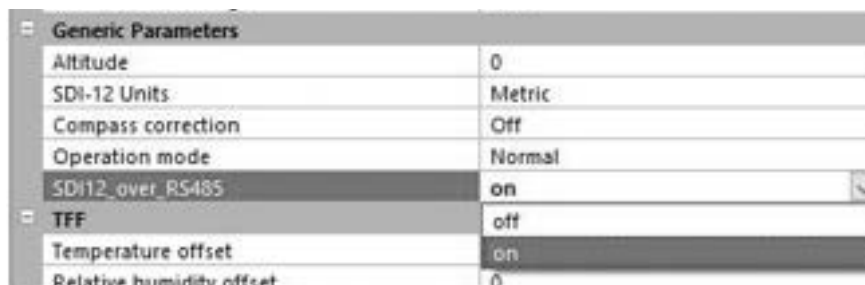

| Generic Parameters       |        |
|--------------------------|--------|
| Altitude                 | 0      |
| SDI-12 Units             | Metric |
| Compass correction       | Off    |
| Operation mode           | Normal |
| SDI12_over_RS485         | on     |
| TFF                      |        |
| Temperature offset       | on     |
| Relative humidity offset | 0      |

- Using the ISOCON-UMB for SDI-12 over RS485 does not work because the RS485 interfaces of ISOCON-UMB are fixed to 19200 bd.

### 9.3 Command set

The commands listed below are available for devices of the smart weather sensors.

The composition of the minimal and the full basic data set depends on the respective device variant. The same applies to the availability of the additional measurement commands (aM1!, aC1!, etc.). Due to the measuring processes used, the devices measure continuously in normal operation mode.

This causes the following special properties while in normal operation mode:

- The device does not need a “Wakeup” and does not have a sleep mode. So the reactions to “Break” signals and any related timings are inapplicable. “Break” will be ignored by the devices.
- Data requested with M-commands or C-commands are always available immediately. The device will always respond with a000n resp. a000nn. This means the device will not send any service request and will ignore measurement abort signals. The logger should request the data immediately.
- M-command and C-command only differ in the number of values made available in the buffers (in both cases the maximum permitted by the standards of 9 resp. 20).
- The commands for continuous measurement (R-commands) are used to request the data.
- When in power saving mode 2 the device will wake up by a „Break“ signal. Other functions of the „Break“ signal are not implemented.
- When in power saving mode 2 the device responds to M-commands or C-commands with a002n resp. a002nn and holds the data available within 2 seconds. A service request is not sent, signals to abort the measurement are ignored.
- For the reduced data set in power saving mode 2 a unified data buffer structure for all device models has been defined. Depending on the individual model unused channels will be set to the “invalid” marker 999.9.

| Command         | Function  | Details  |
|-----------------|---|--|
| ?!              | Address search (Wildcard request, one device only on bus!)                        | Standard   |
| a!              | Request device active?  | Standard   |
| aI!             | Request device identification   | all  |
| aAb!            | Address change to b ( 0 ... 9, A ...Z, a ... z)                                   | Standard   |
| aM!             | Measurement basic minimal data set  | WS200, WS300, WS301, WS302, WS310, WS400, WS401, WS500, WS501, WS502, WS510, WS600, WS601, WS700, WS800, PSM 2 all |
| aM1!            | Measurement temperatures  | all  |
| aM2!            | Measurement humidity  | all  |
| aM3!            | Measurement air pressure  | all  |
| aM4!            | Measurement wind  | all  |
| aM5!            | Measurement compass   | all  |
| aM6!            | Measurement precipitation   | all  |
| aM7!            | Measurement global radiation  | all  |
| aM8!            | Measurement external temperature  | all  |
| aMC!            | Measurement, basic minimal data set, transmit values with CRC                     | see aM!  |
| aMC1! ... aMC8! | Measurement (assignment of values as for aMn! commands), transmit values with CRC | see aM1! ... aM8!  |

| Command         | Function   | Details  |
|-----------------|--|--|
| aC!             | Concurrent measurement, full basic data set  | see aM1!   |
| aC1! ... aC8!   | Concurrent measurement, assignment of values as for aMn! commands, partly extended data sets                           | see aM1! ... aM8!  |
| aCC!            | Concurrent measurement, transmit values with CRC   | see aM!  |
| aCC1! ... aCC8! | Concurrent measurement, assignment of values as for aMn! commands, partly extended data sets, transmit values with CRC | see aM1! ... aM8!  |
| aD0!            | Data request buffer 0  | Standard   |
| aD1!            | Data request buffer 1  | Standard   |
| aD2!            | Data request buffer 2  | Standard   |
| aD3!            | Data request buffer 3  | Standard   |
| aD4!            | Data request buffer 4  | Standard   |
| aR0!            | Data request from continuous measurement, data set 0   | WS200, WS300, WS301, WS302, WS310, WS400, WS401, WS500, WS501, WS502, WS510, WS600, WS601, WS700, WS800, PSM 2 all |
| aR1!            | Data request from continuous measurement, data set 1   | see R0!  |
| aR2!            | Data request from continuous measurement, data set 2   | see R0!  |
| aR3!            | Data request from continuous measurement, data set 3   | see R0!  |
| aR4!            | Data request from continuous measurement, data set 4   | see R0!  |
| aRC0!           | Data request from cont. meas., data set 0 with CRC   | see R0!  |
| aRC1!           | Data request from cont. meas., data set 0 with CRC   | see R0!  |
| aRC2!           | Data request from cont. meas., data set 0 with CRC   | see R0!  |
| aRC3!           | Data request from cont. meas., data set 0 with CRC   | see R0!  |
| aRC4!           | Data request from cont. meas., data set 0 with CRC   | see R0!  |
| aV!             | Command verification: Evaluate sensor status and heating temperatures, data request with aD0!, aD1!                    | all  |
| aXU<m/u>!       | Change the unit system for SDI data  | all  |
| aXH+nnnn!       | Set local altitude of the device for calculation of rel. air pressure  | all  |
| aXD+nnn.n!      | Set local compass deviation  | all  |
| aXW<c/u>!       | Activate / deactivate compass correction   | all  |
| aXL<n/s/w>!     | Set power saving mode  | all  |
| aXMn!           | Set the heating mode of the device   | all  |
| aXK+n!          | Set rain gauge resolution  | all  |
| aXA<t/p/w>+nn!  | Integration time for average and min/max evaluation  | all  |
| aXC!            | Clear the abs. precipitation amount ( includes a device reset)   | all  |
| aXR!            | Device reset   | all  |
| aXVd!           | Read device version  | all  |

## Address configuration

The UMB device-ID and SDI-12 address are connected. The different address ranges and the fact that UMB IDs are integer numbers, while SDI-12 addresses are ASCII characters, have to be considered.

The SDI-12 address is built from the UMB device ID as follows: UMB device ID 1 (default) corresponds to SDI-12 address '0' (SDI-12 default).

Changing the SDI-12 address by SDI-12 setting command also modifies the UMB device ID accordingly.

| UMB (dec) |    |    | SDI-12 (ASCII) |    |     |
|-----------|----|----|----------------|----|-----|
| 1         | to | 10 | '0'            | to | '9' |
| 18        | to | 43 | 'A'            | to | 'Z' |
| 50        | to | 75 | 'a'            | to | 'z' |

*Valid address ranges*

### 9.4 Data messages

To simplify the evaluation, the assignment of measurement values to data buffers '0' ... '9' has been defined uniformly for all measurement commands. The responses to C-requests have been restricted to 35 characters. Buffers '0' to '4' are currently in use.

A maximum of 9 values can be transferred; the basic data set of 9 values has been assigned to buffers '0' and '1'. The buffers '2' to '4' contain further measurement values. This ensures compatibility with loggers based on older versions of the SDI-12 standard.

The buffer assignment depends on the device variant. The complete set of measurement values defined for the UMB protocol is available in the SDI-12 environment and can be called up via the additional M-commands and C-commands: aM1! ... aM8!, aMC1! ... aMC8!, aC1! ... aC8!, aCC1! ... aCC8!.

If the measurement value is not available, e.g. through sensor failure, this is indicated by a value of +999.0. or -999.9. Using an aV! verification query, the logger evaluates the reason for failure. The following table shows the measurement values in the sequence they are arranged in the telegram (see example). Depending on the configuration of the device the values will be transmitted in metric or imperial US units.

- i The configured system of units is not indicated in the data messages. The logger may request this setting with the I-command and adjust the evaluation of the data messages accordingly.
- i The example uses italics to print the requests from the logger (*OM!*).

### Example: M request from a WS600

OM!

00009<CR><LF> 9 measurement values are available.

OD0!

0+13.5+85.7+1017.0+2.5+3.7<CR><LF>

Air temperature 13.5 °C, rel. humidity 85.7 %, rel. air pressure 1017 hPa avg. wind speed 2.5 m/s, max wind speed 3.7 m/s.

OD1!

0+43.7+9.8+60+4.4<CR><LF>

Wind direction 43.7° wet bulb temperature 9.8 °C, type of precipitation 60 (rain), precipitation intensity 4.4 mm/h.

### 9.5 Additional measurement commands

The following additional measurement commands are available:

- aM1! ... aM8!
- aMC1! ... aMC8! (M-command, data transmission with CRC)
- aC1! ... aC8!
- aCC1! ... aCC8! (C- command, data transmission with CRC)

The complete data sets of the smart weather sensor, as defined for the UMB protocol are available in a SDI-12 environment as well. The measurement values are ordered according to sensor types. Equally to the base data sets maximum 9 values can be requested with an additional M-command, while an additional C-request allows for up to 20 values. The buffer assignment as documented in the following paragraphs has been structured in a way that with each M-command the buffers D0 and D1 are used. If the respective sensor type has more values available, the buffers D2 up to D4 will be occupied if required.


|           |                                      |             |              |
|-----------|--------------------------------------|-------------|--------------|
| M1 / C1   | Temperature                          | M: 9 values | C: 9 values  |
| M2 / C2   | Humidity                             | M: 9 values | C: 13 values |
| M3 / C3   | Air pressure                         | M: 9 values | C: 9 values  |
| M4 / C4   | Wind                                 | M: 9 values | C: 14 values |
| M5 / C5   | Compass                              | M: 1 values | C: 1 values  |
| M6 / C6   |                                      |             |              |
| WS401/601 | Precipitation                        | M: 9 values | C: 9 values  |
| Others    | Precipitation                        | M: 4 values | C: 4 values  |
| M7 / C7   |                                      |             |              |
| WS800     | Global radiation<br>Lightning sensor | M: 9 values | C: 10 values |
| Others    | Global radiation                     | M: 4 values | C: 4 values  |
| M8 / C8   | Ext. temperature                     | M: 1 value  | C: 1 value   |

If the sensor type requested with the measurement command is not available with the actual variant of the smart weather sensor, the device will respond as follows:

a0000<CR><LF> resp.

a00000<CR><LF>

## Example: Buffer Assignment Additional Measurement Commands M1 / C1: Temperature

 Further information can be found in the User Manual Smart Weather Sensors.

Device configured for measurement values in metric units (°C):

| Measurement value          | UMB channel | Minimum | Maximum |
|----------------------------|-------------|---------|---------|
| Buffer '0'                 |             |         |         |
| Air Temperature (act)      | 100         | -50.0   | 60.0    |
| Air Temperature (min)      | 120         | -50.0   | 60.0    |
| Air Temperature (max)      | 140         | -50.0   | 60.0    |
| Air Temperature (avg)      | 160         | -50.0   | 60.0    |
| Dew Point (act)            | 110         | -50.0   | 60.0    |
| Buffer '1'                 |             |         |         |
| Dew Point (min)            | 130         | -50.0   | 60.0    |
| Dew Point (max)            | 150         | -50.0   | 60.0    |
| Dew Point (avg)            | 170         | -50.0   | 60.0    |
| Wet Bulb Temperature (act) | 114         | -50.0   | 60.0    |

Example: Request with M command

*0M1!*

00009<CR><LF>

*0D0!*

0+12.5+10.7+13.5+11.8+5.3<CR><LF>

*0D1!*

0+4.2+5.9+5.6+9.8<CR><LF>

Device configured for measurement values in imperial US units (°F):

| Measurement value          | UMB channel | Minimum | Maximum |
|----------------------------|-------------|---------|---------|
| Buffer '0'                 |             |         |         |
| Air Temperature (act)      | 105         | -58.0   | 140.0   |
| Air Temperature (min)      | 125         | -58.0   | 140.0   |
| Air Temperature (max)      | 145         | -58.0   | 140.0   |
| Air Temperature (avg)      | 165         | -58.0   | 140.0   |
| Dew Point (act)            | 115         | 58.0    | 140.0   |
| Buffer '1'                 |             |         |         |
| Dew Point (min)            | 135         | -58.0   | 140.0   |
| Dew Point (max)            | 155         | -58.0   | 140.0   |
| Dew Point (avg)            | 175         | -58.0   | 140.0   |
| Wet Bulb Temperature (act) | 119         | -58.0   | 140.0   |

## 9.6 Message device identification

The device responds to the identification request with following message ():

Example: SDI-12 device address '0'

*0I!*

013Lufft.deWSx00ynnn

x: device type (4, 5, 6, 2, 3 )

y: Metric / US units (m = metric, u = US)

nnn: Software version

Example: WS600, configured for imperial US units

*0I!*

013Lufft.deWS600u022

## 9.7 Message verification



Further information can be found in the User Manual Smart Weather Sensors.

The command verification aV! is used to evaluate status information of the device.

The device responds to the request as follows:

a0005<CR<LF>, i.e. 5 values are available in the buffers

a0006<CR<LF>, i.e. 6 values are available in the buffers (WS700 and WS800)

The first 3 or 4 measurement values, transmitted in buffer '0' contain the status information of the measurement channels.

Buffer '0', status information:

| Measurement channels    | Measurement values  | Comment   |
|-------------------------|---|---|
| Status group1: +nnnn    | Air temperature, air temperature buffer, dew point, dew point buffer  | -   |
| Status group1: +nnnnnn  | Air temperature, air temperature buffer, dew point, dew point buffer, reserved, reserved                                      | WS401 and WS601 only  |
| Status group 2: +nnnnnn | Relative humidity, relative humidity buffer, absolute humidity, absolute humidity buffer, mixing ration, mixing ration buffer | -   |
| Status group 3: +nnnnnn | Air pressure, air pressure buffer, wind, wind buffer, compass, precipitation  | WS301 and WS501 transmit the global radiation status instead of the precipitation status. |
| Status group 4: +nnnn   | Global radiation status, global radiation buffer status, lightning detector status, lightning detector buffer status          | WS700 and WS800 only  |

The status data of the channels are assembled to form “fake measurement values”, where each digit represents one status.

Sensor status codes:

| Sensor status   | Code |
|---|------|
| OK  | 0    |
| UNGLTG_KANAL  | 1    |
| E2_CAL_ERROR<br>E2_CRC_KAL_ERR<br>FLASH_CRC_ERR<br>FLASH_WRITE_ERR<br>FLASH_FLOAT_ERR | 2    |
| MEAS_ERROR  | 3    |
| MEAS_UNABLE   | 4    |
| INIT_ERROR  | 5    |
| VALUE_OVERFLOW<br>CHANNEL_OVERRANGE   | 6    |
| VALUE_UNDERFLOW<br>CHANNEL_UNDERRANGE   | 7    |
| BUSY  | 8    |
| Other sensor status   | 9    |

Generally each sensor has two status values, one for the direct value and another for the measurement value buffer used for the evaluation of the average, minimum, and maximum values.

The last two values, transmitted in buffer ‘1’, show the heating temperatures of wind and precipitation sensor.

Buffer ‘1’, device configured for metric units (°C):

| Measurement value                        | UMB channel | Minimum | Maximum |
|--|-------------|---------|---------|
| Heating temperature wind sensor          | 112         | -50.0   | 150.0   |
| Heating temperature percipitation sensor | 113         | -50.0   | 150.0   |

Buffer ‘1’, device configured for imperial US units (°F):

| Measurement value                        | UMB channel | Minimum | Maximum |
|--|-------------|---------|---------|
| Heating temperature wind sensor          | 117         | -58.0   | 302.0   |
| Heating temperature percipitation sensor | 118         | -58.0   | 302.0   |

Example: WS600, SDI-12 address '0', no error

*0V!*

00005<CR><LF>

*0D0!*

0+0000+000000+00000<CR><LF>

*0D1!*

0+73.0+65.3<CR><LF>

# 10 Commissioning for MODBUS format

- i The devices can be operated with various protocols, e.g. XDR and UMB-ASCII. Further information on the protocols and the full description of UMB channels, SDI-12 and Modbus protocol can be found in the User Manual Smart Weather Sensors.

## 10.1 Device set-up

Preconfigured smart weather sensors with the MODBUS protocol are available upon request.

With the MODBUS communication protocol, the smart weather sensors can be simply integrated into a PLC environment.

Measurement values are mapped to MODBUS input registers. The range of values available is the same as for the UMB protocol, including different unit systems. The use of register pairs for floating point numbers or 32-bit integers, which are not part of the MODBUS standard, has been dispensed with. All measurement values are mapped to 16 bit integers using suitable scaling factors.

## 10.2 Configuration and testing

The smart weather sensors can be configured for MODBUS-RTU or for MODBUS-ASCII.

The base configuration must be set in the ConfigTool.NET software.

- ▶ Select under *Device parameters* the *Protocol MODBUS-RTU* or *MODBUS-ASCII*.
  - ⇒ The following communication parameters will be preselected: 19200 Bd, even parity.
- ▶ Select the *Baudrate*: 19200, 9600, 4800 or lower.
- ▶ Select the *Interface*: 8E1, 8N1, 8N2.

- i The MODBUS communication has been tested for a poll rate of 1 second. The proper function of the device with higher MODBUS poll rates has not been tested.

We suggest to set the poll rate to 10 seconds or slower. The update rate of the data is  $\geq 10$  seconds, with the exception of the channels "Wind speed / wind direction fast", which are provided for special purposes. For most of the weather data, significant changes have to be expected in the range of minutes.


## 10.3 Addressing

The MODBUS address is deducted from the UMB device ID .

A device with UMB device ID 1 also has the UMB address 1.

The valid address range of MODBUS from 1 to 247 is smaller than that of the UMB device IDs. If a UMB device ID > 247 has been selected, the MODBUS address will be set to 247.

## 10.4 MODBUS functions

 Further information can be found in the User Manual Smart Weather Sensors.

For the smart weather sensors, the functions of conformance class 0 and 1 have been implemented, which operate at register level.

Starting with device version 227 / firmware version v60 additional coil functions are available.

| Command                    | Function                 | Comment  |
|----------------------------|--------------------------|--|
| <b>Conformance Class 0</b> |                          |  |
| 0x03                       | Read holding registers   | Selected configuration settings                          |
| 0x16                       | Write multiple registers | Selected configuration settings                          |
| <b>Conformance Class 1</b> |                          |  |
| 0x01                       | Read Coils               | Selected additional operations (from device version 227) |
| 0x04                       | Read input registers     | Measurement values and status information                |
| 0x05                       | Write single coil        | Selected additional operations (from device version 227) |
| 0x06                       | Write single register    | Selected configuration settings                          |
| 0x07                       | Read exception status    | Currently not used                                       |
| <b>Conformance Class 2</b> |                          |  |
| 0x0F                       | Write multiple coils     | Selected additional operations (from device version 227) |
| <b>Diagnostics</b>         |                          |  |
| 0x11                       | Report responder ID      | (responds also to broadcast address)                     |

### 10.4.1 Function 0x04 read input registers

The input registers are containing the measurement values of the smart weather sensor and the related status information.

The measurement values are mapped to the 16 bit registers using the following scaling factors:

- 0 ... 65530 for unsigned values
- -32762 ... 32762 for signed values

The values 65535 (0xffff) and 32767 are used for the indication of erroneous or not available measurement values. A more detailed specification of the error can be evaluated from the status registers.

The assignment of the values to the register addresses (0 ... 124) has been arranged in a way so that the most frequently used data can be read out with just a few register block requests.

The following blocks have been defined:

- Status information
- Frequently used values which are independent of the unit system (metric / imperial) in use.

- Frequently used values in metric units
- Frequently used values in imperial units
- Other measurement values

When using the metric unit system the first three blocks can supply all data required with one request. There is no difference in the register assignment between the product variants. If, dependent on the variant, some value is not available, this will be indicated by setting the register to the error value.


**i** The following tables mainly show average values. Further values can be found in the User Manual Smart Weather Sensors.

| Register number           | Register address | Value (UMB channel) | Range  | Scaling factor          | Comment                           |
|---------------------------|------------------|---------------------|--|-------------------------|-----------------------------------|
| <b>Status information</b> |                  |                     |  |                         |                                   |
| 1                         | 0                | Identification      | High byte: WS-Type (2,3,4,5,6)<br>Low byte: Software Version   | Type coding             | See Status and type coding [▶ 46] |
| 2                         | 1                | Device Status       | -  | -                       | See Status and type coding [▶ 46] |
| 3                         | 2                | Sensor Status 1     | Air temperature buffer, air temperature, dew point buffer, dew point (high byte -> low byte)                     | Coding 4 bit per status | See Status and type coding [▶ 46] |
| 4                         | 3                | Sensor Status 2     | Relative humidity buffer, relative humidity, absolute humidity buffer, absolute humidity (high byte -> low byte) | Coding 4 bit per status | See Status and type coding [▶ 46] |
| 5                         | 4                | Sensor Status 3     | Mixing ratio buffer, mixing ration, air press. buffer, air pressure (high byte -> low byte)                      | Coding 4 bit per status | See Status and type coding [▶ 46] |
| 6                         | 5                | Sensor Status 4     | Wind buffer, wind, precipitation, compass (high byte -> low byte)  | Coding 4 bit per status | See Status and type coding [▶ 46] |
| 7                         | 6                | Sensor Status 5     | Global radiation buffer, global radiation, reserved, reserved (high byte -> low byte)                            | Coding 4 bit per status | See Status and type coding [▶ 46] |
| 8                         | 7                | Sensor Status 6     | External temperature / external rain gauge, lightning sensor, lightning sensor buffer                            | Coding 4 bit per status | See Status and type coding [▶ 46] |
| 9                         | 8                | Reserved            | -  | -                       | -                                 |
| 10                        | 9                | -                   | Diagnostic: run time in 10 seconds steps   | -                       | -                                 |

| Register number                              | Register address | Value (UMB channel) | Range                        | Scaling factor signed/unsigned | Comment                |
|--|------------------|---------------------|------------------------------|--------------------------------|------------------------|
| <b>Values independent of the unit system</b> |                  |                     |                              |                                |                        |
| 14   | 13               | 260                 | Relative humidity (avg.)     | Factor 10, s                   | –                      |
| 18   | 17               | 365                 | Relative air pressure (avg.) | Factor 10, s                   | –                      |
| 20   | 19               | 520                 | Wind direction (min.)        | Factor 10, s                   | –                      |
| 21   | 20               | 540                 | Wind direction (max.)        | Factor 10, s                   | –                      |
| 25   | 24               | 510                 | Compass                      | Factor 10, s                   | –                      |
| 26   | 25               | 700                 | Precipitation type           | Factor 1, s                    | –                      |
| 27   | 26               | 805                 | Wind measurement quality     | Factor 1, u                    | –                      |
| 31   | 30               | 960                 | Global radiation (avg.)      | Factor 10, s                   | –                      |
| <b>Values in metric units</b>                |                  |                     |                              |                                |                        |
| 35   | 34               | 160                 | Air temperature °C (avg.)    | Factor 10, s                   | –                      |
| 40   | 39               | 111                 | Wind chill-temperature °C    | Factor 10, s                   | –                      |
| 41   | 40               | 112                 | Heating temperature Wind °C  | Factor 10, s                   | –                      |
| 42   | 41               | 113                 | Heating temperature R2S °C   | Factor 10, s                   | –                      |
| 44   | 43               | 420                 | Wind speed m/s (min.)        | Factor 10, s                   | –                      |
| 45   | 44               | 440                 | Wind speed m/s (max.)        | Factor 10, s                   | –                      |
| 46   | 45               | 460                 | Wind speed m/s (avg.)        | Factor 10, s                   | –                      |
| 49   | 48               | 620                 | Precipitation absolute mm    | Factor 100, u                  | Limited to 655.34 mm   |
| 50   | 49               | 625                 | Precipitation different mm   | Factor 100, u                  | Limited to 100.00 mm   |
| 51   | 50               | 820                 | Precipitation intensive mm/h | Factor 100, u                  | Limited to 200.00 mm/h |
| <b>Values in imperial US units</b>           |                  |                     |                              |                                |                        |
| 55   | 54               | 165                 | Air temperature °F (avg.)    | Factor 10, s                   | –                      |
| 59   | 58               | 175                 | Dew point °F (avg.)          | Factor 10, s                   | –                      |
| 60   | 59               | 116                 | Wind chill temperature °F    | Factor 10, s                   | –                      |
| 61   | 60               | 117                 | Heating temperature wind °F  | Factor 10, s                   | –                      |
| 62   | 61               | 118                 | Heating temperature R2S °F   | Factor 10, s                   | –                      |
| 64   | 63               | 430                 | Wind speed mph (min.)        | Factor 10, s                   | –                      |
| 65   | 64               | 450                 | Wind speed mph (max.)        | Factor 10, s                   | –                      |
| 66   | 65               | 470                 | Wind speed mph (avg.)        | Factor 10, s                   | –                      |
| 69   | 68               | 640                 | Precipitation absolute in    | Factor 1000, u                 | Limited to 25.800 in   |
| 70   | 69               | 645                 | Precipitation different in   | Factor 10 000, u               | Limited to 3.9370 in   |
| 71   | 70               | 840                 | Precipitation intensive in/h | Factor 10 000, u               | Limited to 6.5534 in   |
| <b>Further values</b>                        |                  |                     |                              |                                |                        |
| 75   | 74               | 265                 | Absolute humidity (avg.)     | Factor 10, s                   | –                      |
| 79   | 78               | 270                 | Mixing ratio (avg.)          | Factor 10, s                   | –                      |
| 83   | 82               | 360                 | Absolute air pressure (avg.) | Factor 10, s                   | –                      |
| 87   | 86               | 465                 | Wind speed km/h (avg.)       | Factor 10, s                   | –                      |
| 90   | 89               | 435                 | Wind speed kts (min.)        | Factor 10, s                   | –                      |
| 91   | 90               | 455                 | Wind speed kts (max.)        | Factor 10, s                   | –                      |

| Register number | Register address | Value (UMB channel) | Range                             | Scaling factor signed/unsigned | Comment  |
|-----------------|------------------|---------------------|-----------------------------------|--------------------------------|--|
| 92              | 91               | 475                 | Wind speed kts (avg.)             | Factor 10, s                   | –  |
| 96              | 95               | 403                 | Wind speed standard deviation m/s | Factor 100, s                  | Standard deviation values are available after the first request. |
| 97              | 96               | 413                 | Wind speed standard deviation mph | Factor 100, s                  | Standard deviation values are available after the first request. |
| 98              | 97               | 503                 | Wind direction standard deviation | Factor 100, s                  | Standard deviation values are available after the first request. |
| 99              | 98               | 114                 | Wet bulb temperature °C (act)     | Factor 10, s                   | –  |
| 100             | 99               | 119                 | Wet bulb temperature °F (act)     | Factor 10, s                   | –  |
| 101             | 100              | 215                 | Specific enthalpy (act)           | Factor 10, s                   | –  |
| 102             | 101              | 310                 | Air density (act)                 | Factor 1000, s                 | –  |
| 105             | 104              | 750                 | Reserved                          | Factor 1, s                    | –  |
| 106             | 105              | 770                 | Reserved                          | Factor 1, s                    | –  |
| 107             | 106              | 711                 | Reserved                          | Factor 1, s                    | –  |
| 108             | 107              | 101                 | External temperature °C (act)     | Factor 10, s                   | –  |
| 109             | 108              | 109                 | External temperature °F (act)     | Factor 10, s                   | –  |
| 110             | 109              | 806                 | Wind value quality (fast)         | Factor 1, u                    | –  |
| 111             | 110              | 617                 | Lightning events (minute)         | Factor 1, u                    | –  |
| 112             | 111              | 677                 | Lightning Events (Intervall)      | Factor 1, u                    | –  |
| 117             | 116              | Reserved            | –                                 | –                              | –  |

## 10.5 Status and type coding

 Further information can be found in the User Manual Smart Weather Sensors.

### Device status

Under normal operating conditions, the device status is 0. If the device status is not 0, this may indicate a serious system error. Exception: Code 48 after performing a reset to factory settings.

- ▶ Perform another reset.
- ▶ If the device status is not 0, contact the Lufft support team.
- ▶ Consider measurement values collected during or after a non-zero device status to be unreliable.

### Sensor status

Each register holds 4 sensor states, coded with 4 bits per state, which together form a 16-bit number. The sequence is defined from the most significant half-byte to the least significant half-byte. Most sensors have 2 status values, one for the sensor and the current measurement value, another one for the buffer, from which the average value and the minimum and maximum values are evaluated.

# 11 Maintenance

## 11.1 Maintenance schedule


The frequency of cleaning is dependent upon the local weather and environmental conditions. Ideally, the dome of the device should be cleaned at regular intervals.

The following maintenance intervals are recommended:

| Interval     | Activity   | Performed by |
|--------------|--|--------------|
| Twice a week | <ul style="list-style-type: none"><li>▶ Clean the dome using a dry and lint-free cloth.</li><li>▶ For persistent soiling, use additional distilled water. If the soiling is severe, pure alcohol can be used.</li><li>▶ Ensure that no streaks or deposits are left on the dome.</li></ul> | Operator     |
| Monthly      | <ul style="list-style-type: none"><li>▶ Clean the rain gauge funnel if dirty (only relevant for WS401 and WS-601).</li></ul>   | Operator     |
| Annually     | <ul style="list-style-type: none"><li>▶ Check the device for cleanliness.</li><li>▶ Check the device by carrying out a measurement request.</li><li>▶ Check the operation of the fan (except for WS200).</li></ul>   | Operator     |
| Annually     | <ul style="list-style-type: none"><li>▶ Have a calibration check performed (except for WS200).</li></ul>   | OTT HydroMet |

## 11.2 Checking rain gauge

The function of the rain gauge is influenced by pollution of the funnel or the tipping bucket mechanism. The cleaning of the rain gauge depends on the local conditions and seasons (with falling leaves, pollen, etc.) and becomes necessary, when the rain gauge is polluted.

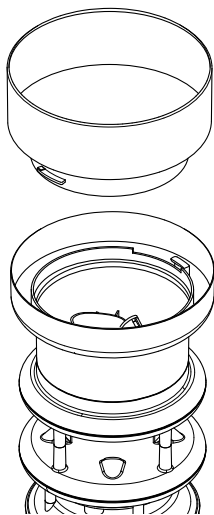

*WS601 with removed funnel*



Each movement of the bucket generates a counting pulse. Avoid moving the tipping mechanism as thus wrong counts can occur.

- ▶ Unlock funnel by turning it to the left and lift it off.
- ▶ Clean funnel, specially the sieve slots.
- ▶ Check the inside of the rain gauge for pollution, especially for spider webs and insects.
- ▶ Clean the rain gauge with a soft cloth/brush and water, if necessary.
- ▶ Check the tipping bucket for pollution.
- ▶ Wash the tipping bucket carefully with clean water, if necessary.
- ▶ Check the water drain.
- ▶ Clean the water drain with a soft cloth/brush and water, if necessary.
- ▶ Put the funnel back in place. Turn the funnel to the right and lock it.

### 11.3 Updating firmware

The firmware can be updated with the ConfigTool.NET software. The firmware is valid for all types of the device. The description of the update can be found in the ConfigTool.NET software.

- ▶ Download the latest version of the firmware and the ConfigTool.NET software: [www.lufft.com/resources/](http://www.lufft.com/resources/).
- ▶ Install the update on a Windows® PC.

**i** Under certain circumstances, the absolute precipitation quantities are reset (channel 600 - 660).

# 12 Troubleshooting

## 12.1 Error elimination

| Error   | Possible cause   | Corrective action  |
|---|--|--|
| Device does not allow polling or does not respond                         | Device does not work properly  | <ul style="list-style-type: none"> <li>▶ Check the power supply.</li> <li>▶ Check the interface connection.</li> </ul> |
| Device does not allow polling or does not respond                         | Incorrect device ID is applied   | ▶ Check if the correct device ID is assigned. Devices are delivered with ID 1.   |
| Device measures precipitation, but it is not raining                      | Device installed incorrectly   | ▶ Check that the device was installed correctly in accordance with the instructions.                                   |
| Measured temperature appears too high / measured humidity appears too low | Fan does not work properly   | ▶ Check whether the fan on the underside of the device is working.   |
| Wind direction values are incorrect                                       | Device is not aligned correctly  | ▶ Check that the device is aligned to the north.   |
| Device transmits error value 24h (36d)                                    | A channel is being polled that is not available on this device type            | –  |
| Device transmits error value 28h (40d)                                    | Device is in the initialization phase following startup                        | ▶ Wait for approx. 10 seconds. The device delivers measurements after approx. 10 seconds.                              |
| Device transmits error value 50h (80d)                                    | Device is being operated above the limit of the specified measuring range      | –  |
| Device transmits error value 51h (81d)                                    | Device is being operated below the limit of the specified measuring range      | –  |
| Device transmits error value 55h (85d) during wind measurement            | Device is being operated well above the limit of the specified measuring range | –  |
| Device transmits error value 55h (85d) during wind measurement            | Very strong horizontal rain or snow  | –  |
| Device transmits error value 55h (85d) during wind measurement            | There are foreign objects within the measuring section of the wind meter       | –  |
| Device transmits error value 55h (85d) during wind measurement            | Wind meter sensors are very dirty  | ▶ Clean the sensor.  |
| Device transmits error value 55h (85d) during wind measurement            | Wind meter sensors are iced over   | ▶ Check the heating mode in the configuration and check the heating function / connection.                             |
| Device transmits error value 55h (85d) during wind measurement            | One of the wind meter's sensors is faulty                                      | ▶ Return the device to the manufacturer for repair.  |

| Error   | Possible cause  | Corrective action   |
|---|---|---|
| Quality of the wind measurement is not always 100 % | In normal operation the device should always transmit 90 – 100 %. Values up to 50 % do not represent a general problem. When the error value 55h (85d) is transmitted, this value is 0 %. If the device permanently transmits values below 50 %, this may mean that there is a fault. | –   |
| Device transmits an unknown error value             | –   | ► Report any malfunction to the representative of OTT HydroMet. |

# 13 Repair


## 13.1 Customer support

- ▶ Have repairs carried out by OTT HydroMet service personnel.
- ▶ Only carry out repairs yourself, if you have first consulted OTT HydroMet.
- ▶ Contact your local representative: [www.otthydromet.com/en/contact-us](http://www.otthydromet.com/en/contact-us)
- ▶ Include the following information:
  - instrument model
  - instrument serial number
  - details of the fault or problem
  - examples of data files
  - readout device or data acquisition system
  - interfaces and power supplies
  - history of any previous repairs or modifications
  - pictures of the installation
  - overview of the local environment conditions

# 14 Notes on disposing of old devices

## Member States of the European Union

In accordance with the German Electrical and Electronic Equipment Act (ElektroG; national implementation of EU Directive 2012/19/EU), OTT HydroMet takes back old devices in the Member States of the European Union and disposes of them in the proper manner. The devices that this concerns are labeled with the following symbol:



- ▶ For further information on the take-back procedure contact OTT HydroMet:

OTT HydroMet Fellbach GmbH

Service & Technical Support

Gutenbergstraße 20

70736 Fellbach

Germany

phone: +49 711 518 22 0

email: met-support@otthydromet.com

## All other countries

- ▶ Dispose of the product in the proper manner following decommissioning.
- ▶ Observe the country-specific regulations on disposing of electronic equipment.
- ▶ Do NOT dispose of the product in household waste.

# 15 Technical data

## 15.1 General technical data

| Specification               | Value   |
|-----------------------------|---|
| Fastening                   | Stainless steel bracket for mast with diameter 60 – 76 mm |
| Housing                     | Plastic (PC)  |
| Protection class            | III (SELV)  |
| Protection type             | IP66  |
| Operating temperature range | -50 to +60 °C   |
| Storage temperature range   | -50 to +70 °C   |
| Humidity range              | 0 to 100 %  |

## 15.2 Electrical data

| Mode <sup>1</sup> | Normal operation mode |         | Power saving mode 1 |         | Power saving mode 2   |         |
|-------------------|-----------------------|---------|---------------------|---------|-----------------------|---------|
|                   | 24 V DC <sup>2</sup>  | 12 V DC | 24 V DC             | 12 V DC | 24 V DC               | 12 V DC |
| WS200             | 16 mA                 | 25 mA   | 15 mA               | 24 mA   | 1 (4) mA <sup>3</sup> | 2 mA    |
| WS300             | 135 mA                | 70 mA   | 7 mA                | 7 mA    | 1 (4) mA <sup>3</sup> | 2 mA    |
| WS301             | 135 mA                | 70 mA   | 8 mA                | 8 mA    | 1 (4) mA <sup>3</sup> | 2 mA    |
| WS302             |                       |         |                     |         |                       |         |
| WS310             |                       |         |                     |         |                       |         |
| WS400             | 160 mA                | 110 mA  | 7 mA                | 7 mA    | –                     | –       |
| WS401             | 130 mA                | 65 mA   | 6 mA                | 6 mA    | 1 (4) mA <sup>3</sup> | 2 mA    |
| WS500             | 140 mA                | 85 mA   | 16 mA               | 25 mA   | 1 (4) mA <sup>3</sup> | 2 mA    |
| WS501             | 145 mA                | 85 mA   | 16 mA               | 25 mA   | 1 (4) mA <sup>3</sup> | 2 mA    |
| WS502             |                       |         |                     |         |                       |         |
| WS510             |                       |         |                     |         |                       |         |
| WS600             | 160 mA                | 130 mA  | 16 mA               | 25 mA   | –                     | –       |
| WS700             |                       |         |                     |         |                       |         |
| WS800             |                       |         |                     |         |                       |         |
| WS601             | 140 mA                | 85 mA   | 15 mA               | 24 mA   | 1 (4) mA <sup>3</sup> | 2 mA    |

<sup>1</sup>Description of operating modes, see Energy management [► 27]

<sup>2</sup>Factory default, recommended setting


<sup>3</sup>Values for devices prior to version 037 in brackets

| Variant | Current consumption | Power input - heating |
|---------|---------------------|-----------------------|
| WS200   | 833 mA              | 20 VA at 24 V DC      |
| WS400   | 833 mA              | 20 VA at 24 V DC      |
| WS500   | 833 mA              | 20 VA at 24 V DC      |
| WS501   |                     |                       |
| WS502   |                     |                       |
| WS510   |                     |                       |


| Variant | Current consumption | Power input - heating |
|---------|---------------------|-----------------------|
| WS600   | 1.7 A               | 40 VA at 24 V DC      |
| WS700   |                     |                       |
| WS800   |                     |                       |
| WS601   | 833 mA              | 20 VA at 24 V DC      |

### 15.3 Dimensions and weight


WS200, 800 g

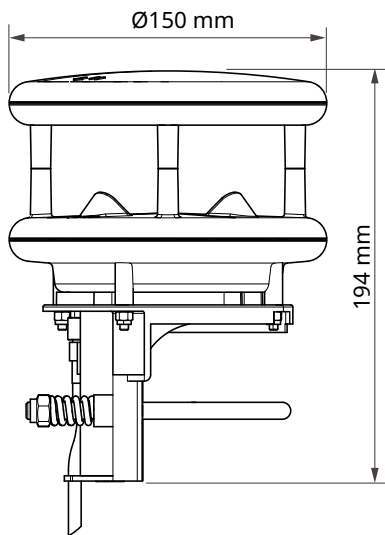


WS300, 1000 g

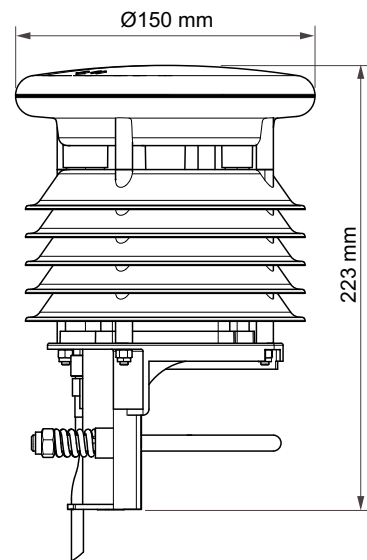


WS301, 1300 g

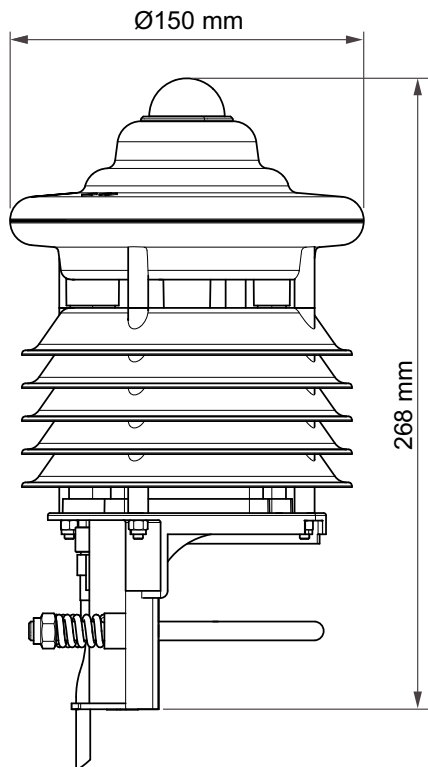


WS302, 1300 g

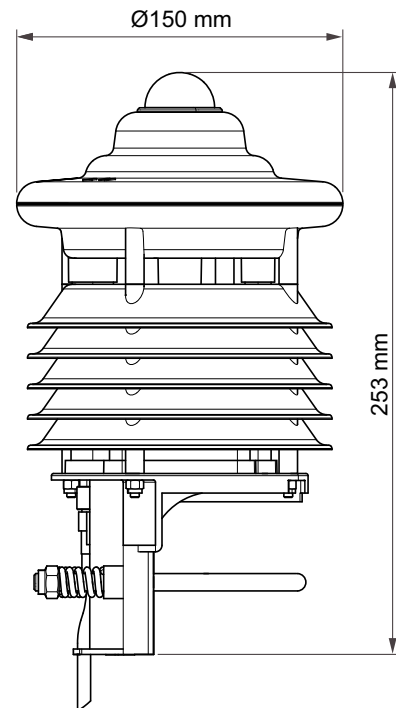


WS310, 1300 g

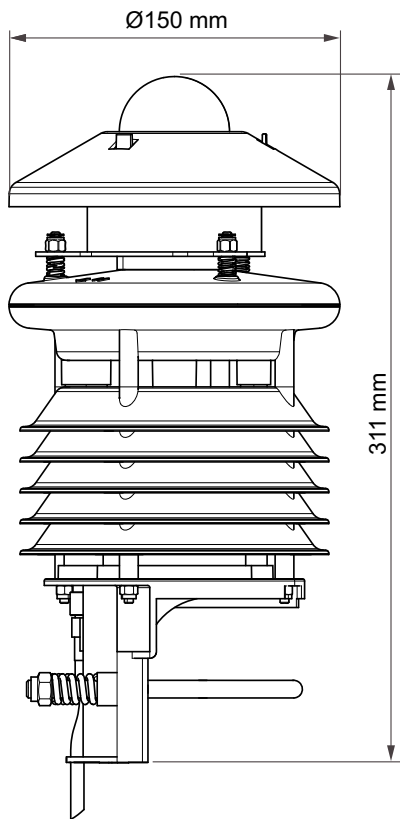


WS400, 1300 g

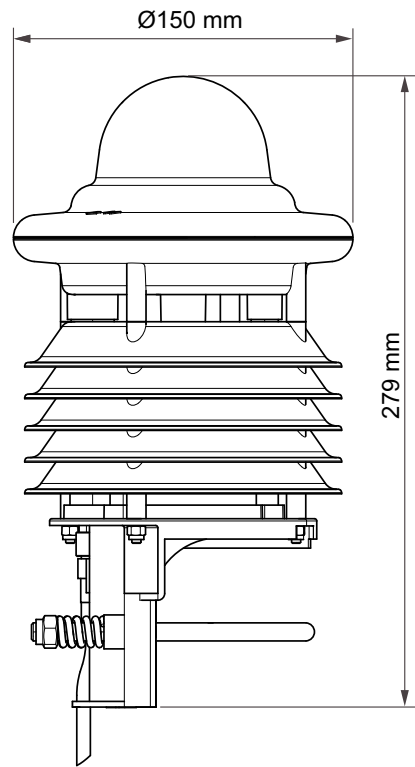


WS401, 1500 g

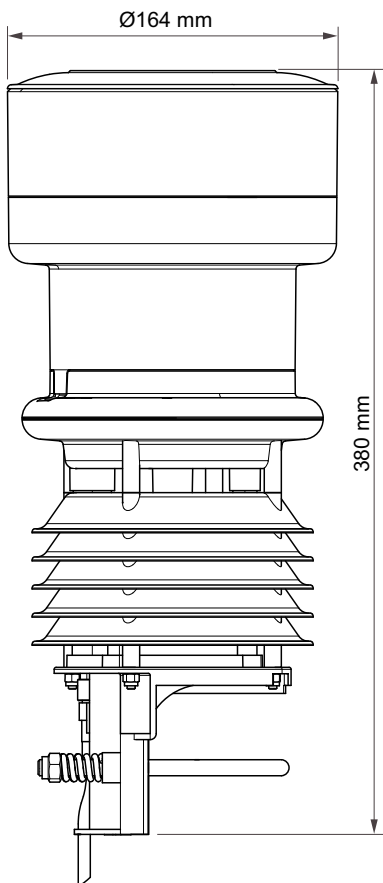


WS500, 1200 g

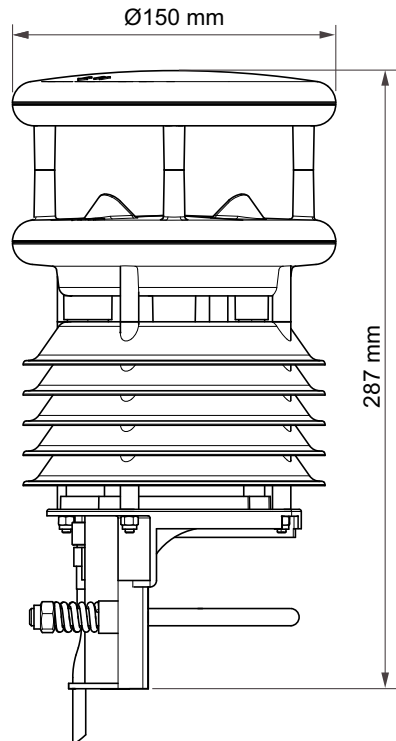


WS501, 1500 g

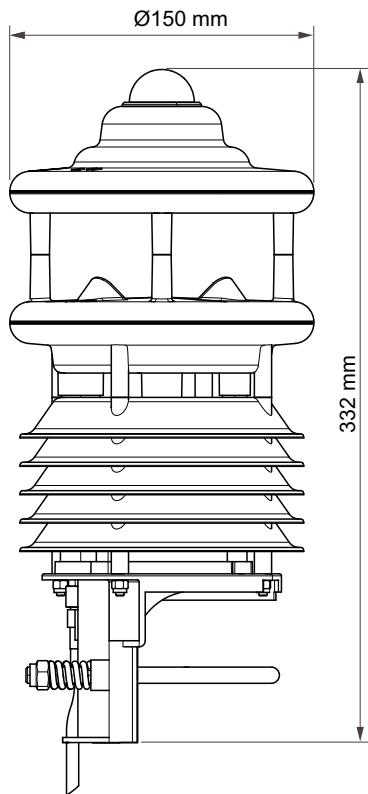


WS502, 1500 g

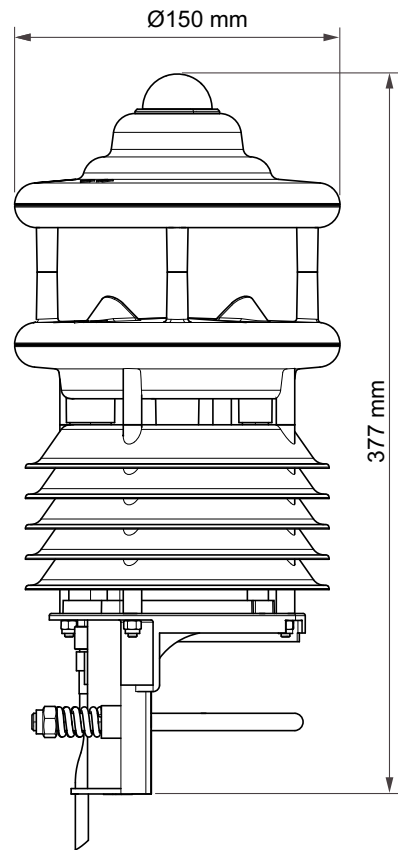


WS510, 1500 g

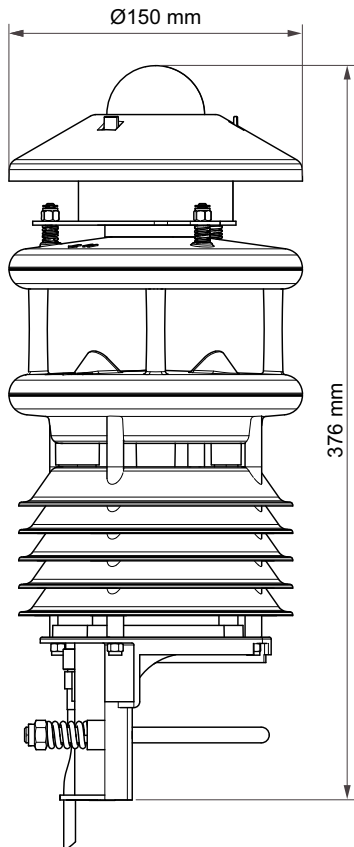


WS600, 1500 g

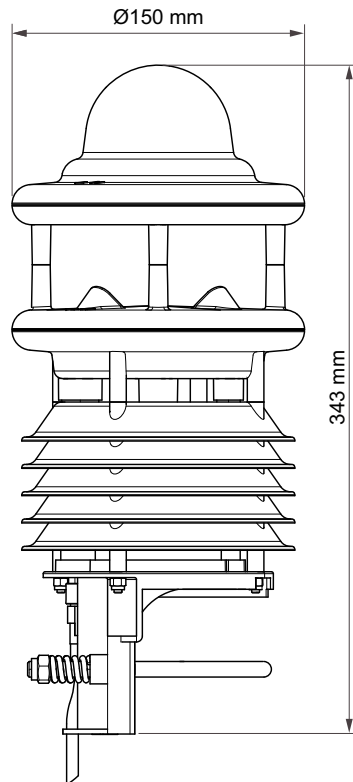

WS601, 1700 g

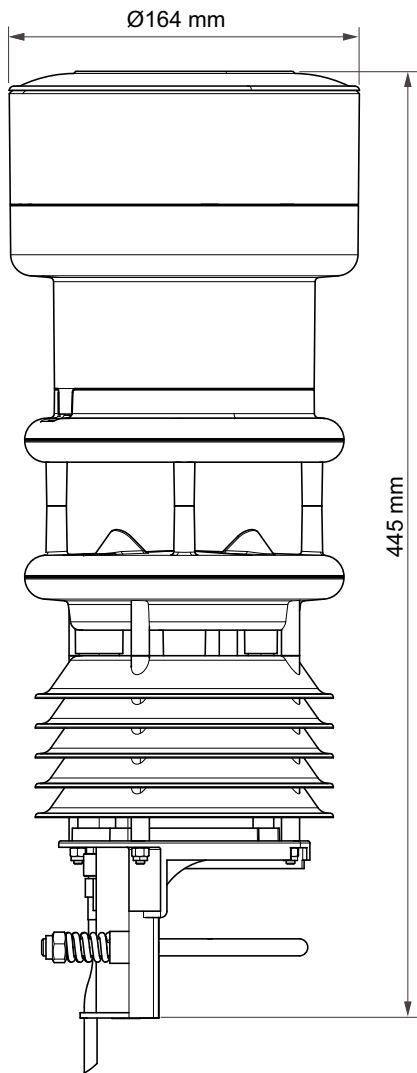

WS700, 1500 g

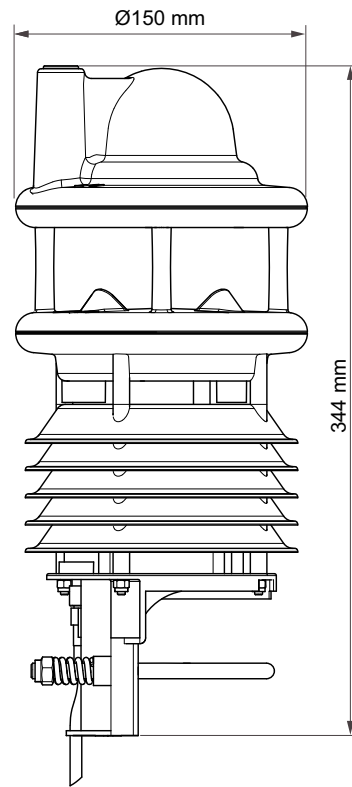

### 15.4 Measuring range and accuracy

| Version | Air temperature | Humidity | Air pressure | Precipitation | Wind direction | Wind speed | Compass | Global radiation | Lightning sensor | Temperature (ext) | Rain gauge (ext) | Power save 2 |
|---------|-----------------|----------|--------------|---------------|----------------|------------|---------|------------------|------------------|-------------------|------------------|--------------|
| WS200   | -               | -        | -            | -             | X              | X          | X       | -                | -                | X                 | X                | X            |
| WS300   | X               | X        | X            | -             | -              | -          | -       | -                | -                | X                 | X                | X            |
| WS301   | X               | X        | X            | -             | -              | -          | -       | X                | -                | X                 | X                | X            |
| WS302   | X               | X        | X            | -             | -              | -          | -       | X                | -                | X                 | X                | X            |
| WS310   | X               | X        | X            | -             | -              | -          | -       | X                | -                | X                 | X                | X            |
| WS400   | X               | X        | X            | X             | -              | -          | -       | -                | -                | X                 | -                | -            |
| WS401   | X               | X        | X            | X             | -              | -          | -       | -                | -                | X                 | -                | X            |
| WS500   | X               | X        | X            | -             | X              | X          | X       | -                | -                | X                 | X                | X            |
| WS501   | X               | X        | X            | -             | X              | X          | X       | X                | -                | X                 | X                | X            |
| WS502   | X               | X        | X            | -             | X              | X          | X       | X                | -                | X                 | X                | X            |
| WS510   | X               | X        | X            | -             | X              | X          | X       | X                | -                | X                 | X                | X            |
| WS600   | X               | X        | X            | X             | X              | X          | X       | -                | -                | X                 | -                | -            |
| WS601   | X               | X        | X            | X             | X              | X          | X       | -                | -                | X                 | -                | X            |
| WS700   | X               | X        | X            | X             | X              | X          | X       | X                | -                | X                 | -                | -            |
| WS800   | X               | X        | X            | X             | X              | X          | X       | X                | X                | X                 | -                | -            |

**i** The external temperature sensor and rain gauge use the same input, so only one of them can be connected simultaneously.

**Air temperature**

| Specification       | Value  |
|---------------------|--|
| Measurement process | NTC  |
| Measuring range     | -50 °C to +60 °C   |
| Resolution          | 0.1 °C (-20 °C to +50 °C)<br>otherwise 0.2 °C                  |
| Sensor accuracy     | +/-0.2 °C (-20 °C to +50 °C)<br>otherwise +/-0.5 °C (> -30 °C) |
| Sampling rate       | 1 minute   |
| Units               | °C; °F   |

**Humidity**

| Specification       | Value                         |
|---------------------|-------------------------------|
| Measurement process | Capacitive                    |
| Measuring range     | 0 to 100 % RH                 |
| Resolution          | 0.1 % RH                      |
| Accuracy            | +/-2 % RH                     |
| Sampling rate       | 1 minute                      |
| Units               | % RH; g/m <sup>3</sup> ; g/kg |

**Dewpoint temperature**

| Specification       | Value   |
|---------------------|---|
| Measurement process | Passive, calculated from temperature and humidity |
| Measuring range     | -50 °C to +60 °C                                  |
| Resolution          | 0.1 °C  |
| Accuracy            | Computed +/-0.7 °C                                |
| Units               | °C; °F  |

### Air pressure

| Specification       | Value                       |
|---------------------|-----------------------------|
| Measurement process | MEMS sensor - capacitive    |
| Measuring range     | 300 to 1200 hPa             |
| Resolution          | 0.1 hPa                     |
| Accuracy            | +/-0.5 hPa (0 °C to +40 °C) |
| Sampling rate       | 1 minute                    |
| Units               | hPa                         |

### Wind speed

| Specification                                | Value   |
|--|---|
| Measurement process                          | Ultrasonic  |
| Measuring range                              | 0 to 75 m/s<br>except WS601: 0 to 30 m/s              |
| Resolution                                   | 0.1 m/s   |
| Accuracy                                     | ±0.3 m/s or ±3 % (0 to 35 m/s)<br>±5 % (> 35 m/s) RMS |
| Response threshold                           | 0.3 m/s   |
| Internal sampling frequency                  | 15 Hz   |
| Instantaneous value                          | 1 sec / 10 sec  |
| Output rate for average and peak gust values | 1 to 10 minutes (peak calculated from 1 sec-values)   |
| Units  | m/s; km/h; mph; kts                                   |

### Wind direction

| Specification                                | Value   |
|--|---|
| Measurement process                          | Ultrasonic  |
| Measuring range                              | 0 to 359.9°   |
| Resolution                                   | 0.1°  |
| Accuracy                                     | < 3° (> 1 m/s) RMSE                                 |
| Response threshold                           | 0.3 m/s   |
| Internal sampling frequency                  | 15 Hz   |
| Instantaneous value                          | 1 sec / 10 sec                                      |
| Output rate for average and peak gust values | 1 to 10 minutes (peak calculated from 1 sec-values) |

### Precipitation

| Specification                   | Value  |  |
|---------------------------------|--|--|
|                                 | WS400<br>WS600<br>WS700<br>WS800                     | WS401<br>WS601                                 |
| Measurement process             | Radar sensor   | Rain gauge                                     |
| Measuring range (drop size)     | 0.3 mm to 5.0 mm                                     | -  |
| Liquid precipitation resolution | 0.01 mm  | 0.2 mm / 0.5 mm (adjustable by reduction ring) |
| Precipitation types             | Rain, snow   | Rain   |
| Accuracy                        | -  | 2 %  |
| Repeatability                   | Typically > 90 %                                     | -  |
| Response threshold              | 0.002 mm   | -  |
| Sampling rate                   | Event-dependent on reaching response threshold       | 1 minute                                       |
| Precipitation intensity         | 0 to 200 mm/h; Sampling rate 1 min, resol. 0.01 mm/h | -  |

### Compass

| Specification       | Value                         |
|---------------------|-------------------------------|
| Measurement process | Integrated electronic compass |
| Measuring range     | 0 to 359.9°                   |
| Resolution          | 1.0°                          |
| Accuracy            | +/- 10°                       |
| Sampling rate       | 5 minutes                     |

### Global radiation

| Specification       | Value                          |
|---------------------|--------------------------------|
| Measurement process | Thermopile pyranometer         |
| Measuring range     | 0.0 to 2000.0 W/m <sup>2</sup> |
| Resolution          | < 1 W/m <sup>2</sup>           |
| Sampling rate       | 10 seconds                     |

| Specification   | Value                    |                                  |                          |
|---|--------------------------|----------------------------------|--------------------------|
|   | WS301<br>WS501           | WS302<br>WS502<br>WS700<br>WS800 | WS310<br>WS510           |
| Response time (95 %)                                    | 18 s                     | < 1 s                            | 5 s                      |
| Non-stability (change/year)                             | < 1 %                    | –                                | < 0.5 %                  |
| Non-linearity (0 to 1000 W/m <sup>2</sup> )             | < 1 %                    | –                                | < 0.2 %                  |
| Directional error (at 80 ° with 1000 W/m <sup>2</sup> ) | < 20 W/m <sup>2</sup>    | –                                | < 10 W/m <sup>2</sup>    |
| Temperature dependence of sensitivity                   | < 5 % (-10 °C to +40 °C) | –                                | < 1 % (-10 °C to +40 °C) |
| Tilt error (at 1000 W/m <sup>2</sup> )                  | < 1 %                    | –                                | < 0.2 %                  |
| Spectral range (50 % points)                            | 300 to 2800 nm           | 300 to 1100 nm                   | 285 to 2800 nm           |

### External temperature sensor WT1/WST1

| Specification       | Value  |
|---------------------|--|
| Measurement process | NTC  |
| Measuring range     | -40 °C to +80 °C                                   |
| Resolution          | 0.25 °C  |
| Sensor accuracy     | +/-1 °C (WST1: +/-0.3 °C between -10 °C to +10 °C) |
| Sampling rate       | 1 minute   |
| Units               | °C; °F   |

### External rain gauge WTB100

| Specification                   | Value  |
|---------------------------------|--|
| Measurement process             | Rain gauge with bounce-free reed contact (normally closed) |
| Liquid precipitation resolution | 0.2 mm / 0.5 mm (adjustable by reduction ring)             |
| Precipitation types             | Rain   |
| Accuracy                        | 2 %  |
| Sampling rate                   | 1 minute   |



Contact Information

